

Multimedia Navigation System

2Din Quick Start Guide



System Features:

- Navigation
- Bluetooth Hands-Free
- iPod® and MP3 compatible
- Back-up camera and/or sensor ready
- Play DVDs, Audio CDs, MP3 Discs
- Supports steering wheel controls
- Built-in MP3 Recorder
- Satellite Radio ready

CARSHOW

Notices

NOTICE OF INTENDED USE

Some features of CarShow Entertainment Systems are not intended for viewing by the driver when the vehicle is in motion, such as movie playback. When using navigation, minimize the amount of time spent viewing the screen and use voice prompts as much as possible. Avoid prolonged use of the touch screen controls. Such use might distract the driver or interfere with the driver's safe operation of the vehicle, and thus result in serious injury or death. Such use might also violate state or local laws.

CarShow Entertainment Systems disclaims any liability for
any bodily injury or property damage that might result
from any improper or unintended use.

Copyright © 2012 by CarShow Entertainment Systems. All rights reserved. Except as permitted under the Copyright Act of 1976, no part of this publication may be reproduced or distributed in any form or by any means, or stored in a database or retrieval system, without the prior written permission of CarShow Entertainment Systems.

About the Registered Marks

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

iPod® is a registered trademark of Apple Computer, Inc.

NOTE: Features and specifications listed in this manual are subject to change without notice.

Screen Organization

Your system will automatically default to the last screen you were on prior to turning off the unit.

The Information Bar is located at the top of the screen. Depending on the source, it will provide information or content sensitive controls



MENU This will take you to the Settings Menu for advanced control settings.



The Source Tabs located at the bottom of the screen will give you direct access to common sources.

Note: "PHONE" is highlighted BLUE when a phone is paired to CarShowBluetooth.

Vehicle Specific Features

Some vehicles have special settings within the unit. If your vehicle is listed, please refer to the page given below.

Mazda CX-9: For clock instructions, please visit page 9

Subaru Forester: For steering wheel control functions, please visit page 10

Subaru Legacy: For steering wheel control functions, please visit page 10

Honda Accord: First source tab is labeled MAIN, please refer to Accord note on page 3

F150: Unit functions with SYNC technology. Some features in this guide may not apply

Radio

F150: Most functions on the unit are controlled by either SYNC or the Factory buttons. Please refer to your Factory Owner's Manual for all other instructions.

Radio and Satellite Display

For Radio and Satellite functions, the upper display provides a convenient location to view Radio and Satellite information such as preset stations, station ID and song and artist information.



Preset Channels

The Preset options for your radio may vary depending on the source.

To set a station as a Preset, press and hold the desired button.

Short touch the Preset button to select that channel.



Accord Note: Depending on the model of your CarShow system, the first Source Tab may be labeled either AM/FM or MAIN. Selecting the Tab labeled MAIN will conveniently switch the system control to the Main Radio console.



iPod Audio

When the optional iPod interface is connected to a compatible iPod player, the audio files stored on the iPod can be played through the system.

Note: Sleep mode should be enabled on the iPod to reduce battery drain if the iPod is left connected with the vehicle off.

Touch Button Descriptions

Keypad Show/hide the key pad

Repeat Repeat the current played song

Scan Scan and play songs in the current folder. The next song will be played after the current song has played for several seconds.

Shuffle Play songs in the current folder in random order.

MENU Touch to enter category list. The system categorizes into 6 options

EQ Press once to display song information.
Press twice to display spectrum graphics.



Play A Song

Touch the song shown on playlist to play.

◀ Select previous song

▶ Select next song

▲ Page up

▼ Page down

▶|| Play/Pause



CD/DVD

CD/DVD

-  Play/Pause track
-  Stop track
-  Play previous song/chapter
-  Play next song/chapter
-  Repeat current song played



CD Only


-  Change audio EQ setting
-  Change spectrum display
-  Play songs on disc in random order
-  Scan songs for several seconds
-  Copy song to Favorites folder



DVD Only

Long Touch in DVD mode to show the DVD control screen. To return to full screen, either touch the image or let the screen idle for 10 seconds

-  Set up DVD
-  Change language
-  Show current title info
-  Main DVD menu
-  Shows information such as Chapter, Time Elapsed, etc

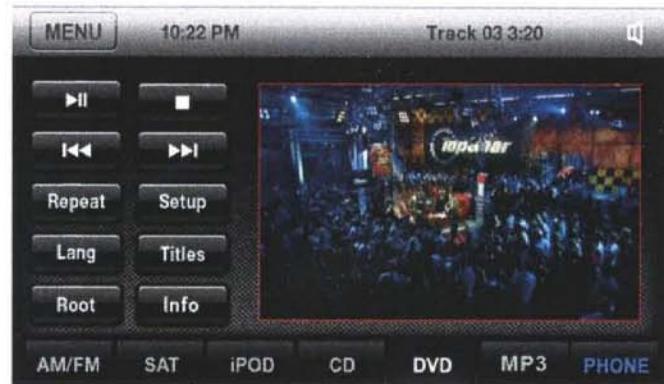

Bluetooth Hands-Free

Note: This system requires a Bluetooth enabled phone. Bluetooth phones and software vary by brand and date of manufacture. Some phones or phone functions may not be compatible or may operate differently with this system during use. Phone compatibility problems are not warrantable issues.

There are several different Bluetooth screens in the PHONE function. The first screen you will see is the Call Screen. To switch between screens, press the PHONE tab repeatedly.

Pairing Your Phone

Place your phone into discovery mode.

PHONE Press the PHONE tab to open the Bluetooth set-up page.


Pair Press "Pair" to pair your cell phone for the first time. You will only need to do this once, unless you connect to a different cell phone or the connection is deleted.

"Pairing" will be displayed on the screen. After the connection succeeds on your phone, select "Rosen" and enter the password (1234). The system will indicate "Linking" and then "Connected." When your phone is connected its name will be displayed on the unit.



Note: If using factory Bluetooth, please refer to your vehicle's owner's manual.

Making/Ending A Call

 **Call** You can dial the number from your phone or use the touch-screen shown at the right by entering the number, then press the Call button.



Clear Clear last number

 **Redial** Press to redial the last number dialed with the touch screen.

 **Switch** Press to transfer call between cell phone and car speakers.

 **End** Press to end the call.

Answer An Incoming Call

 **Answer** For incoming calls, the system will automatically switch to the answer screen. Press to answer.



Note: While in Navigation mode the incoming call box will disappear. Touch the screen to show the incoming call box.

Call List

The call list can be used to view missed, received and made calls.

The system will not display your cell phone's internal phonebook but will show the last numbers missed, received or made. Press the appropriate button on the screen to view the numbers. To make a call from the list, touch the number on the screen and it will automatically dial the number.



Settings

MENU Press to enter the Settings Menu. To change system settings, select desired option.

System Settings

Clock The time displayed on all screens

Reverse Turn the backup camera On/Off

Beep Button beep On/Off.

Spectrum Spectrum On/Off

MIC STD Display the microphone level. Press to switch between "STD and HIGH"

Guide PT Guidepoint

Minder Phone Reminder On/Off
(If using CarShow Bluetooth)

Nav Alert Allows voice prompt to interrupt main audio when directions are being given.

Audio Settings

The AUDIO screen will allow you to adjust audio settings such as Treble, Mid Range, Bass and 5.1 Channel.

Reset Press to reset back to original audio settings

Display Settings

Change the brightness, color and contrast of the display.

+ Press to increase the value

- Press to decrease the value

Reset Press to reset back to original display settings



Settings Menu Screen



Settings Screen



Audio Screen



Display Screen

Mazda CX-9 Clock Setup

The following instructions will guide you through manually setting the clock.

Setting the dash system clock

1. Press Menu to get to the Settings Menu. Press SETTINGS. The clock setup will be displayed on the right.



2. Long Press the "SAVE" button. The 12Hr/24Hr will flash.

3. Press "+" to switch between 12Hr and 24Hr.

4. Press "SAVE" again and the hour will flash.

Press "+" several times until desired hour appears.

5. Short press "SAVE" to lock in the hour. The minutes will now flash. Repeat Step 4 to set the minutes.

6. Press "SAVE" to lock in the minutes. The clock is now set.



Setting the OEM clock

To set the OEM clock, you will access the same SETTINGS menu.

1. Press "+" several times until desired hour appears.

2. Press "-" several times until desired minutes appear.

3. The time you selected will now appear on the OEM clock display


Note: You cannot set the OEM clock while the hour or minutes on the dash system are flashing.

Steering Wheel Control Functions

The right side steering wheel controls are for the instrument cluster trip computer/info display only.




Note: Some steering controls may differ from the picture above.

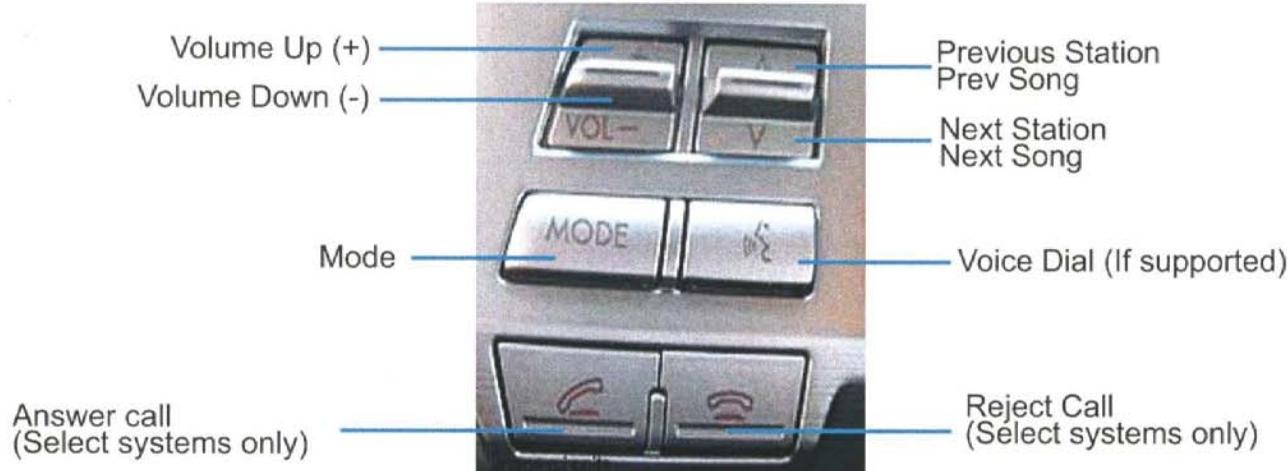

Navigation

Understanding the Map

The top part of the screen shows you what the next street is and which direction to turn on your route

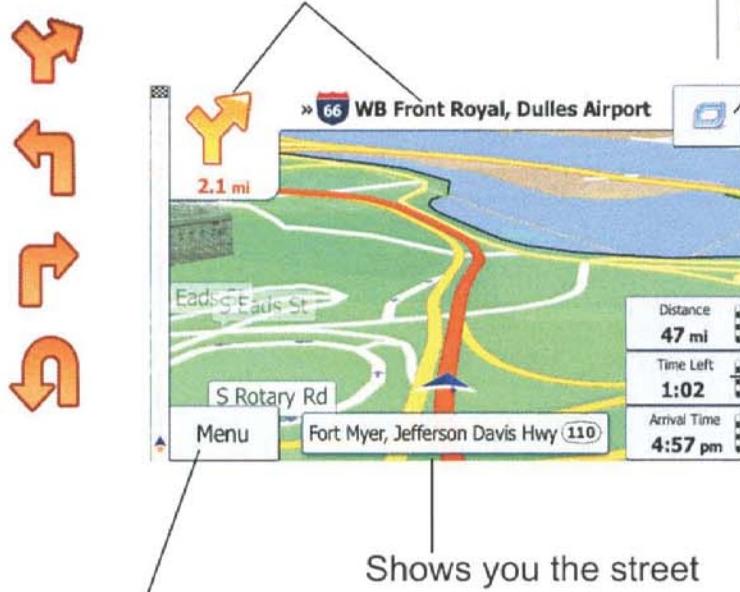


Select the Quick Menu to access the most used functions

Menu

Access the Navigation Menu



 Find an address or Point of Interest and access the Favorites and History menu

 Displays the route details and allows you to edit, change or cancel existing route

 Displays current position, surrounding map area and route.

 Customize the navigation software

These displays show you the distance, time left and the estimated arrival time of your trip




Quick Menu



Located in the top right corner of the map screen is the Quick Menu. In this screen, there is a selection of functions that are frequently needed during navigation.



You can use this option to search for places of interest along the way of your route, such as: Gas Stations, Restaurants, Parking, etc.

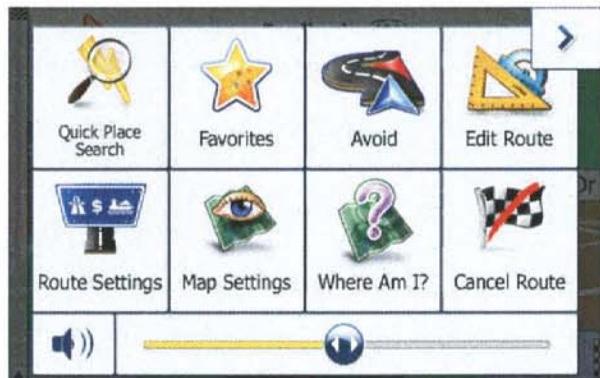

Modifying Existing Routes


You can modify an existing route by accessing either the Quick Menu or Main Navigation menu



You can use this option to select an alternative route to your destination.



This option is a good way to change road types and modes. You can avoid highways, allow toll roads, etc.

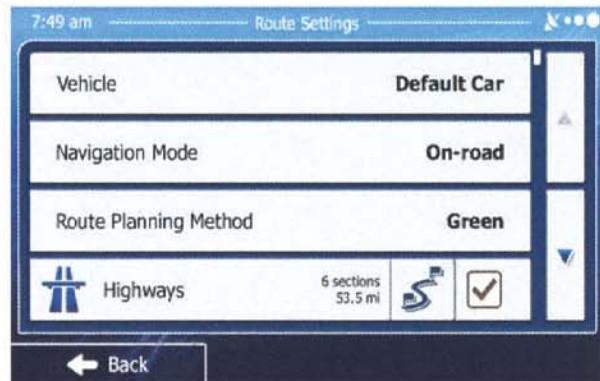


Enter or Find Address

If you are on the Map screen, press MENU. In the Navigation Menu, select Find Address.

Note: By default, the software proposes the country and state where you are currently located.


1. Touch “City Name” and the keyboard screen will appear.

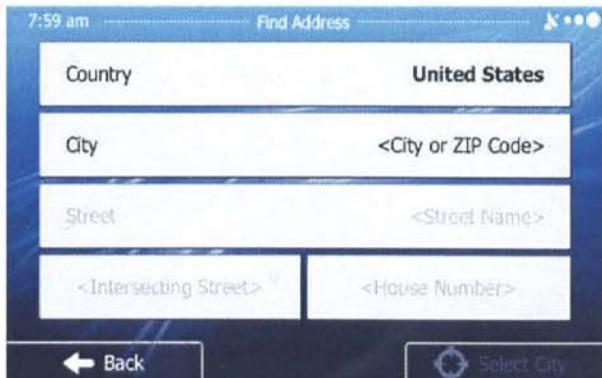


2. Your current city will automatically default. To search for a different city, start typing each letter of the City name




Tap to confirm city

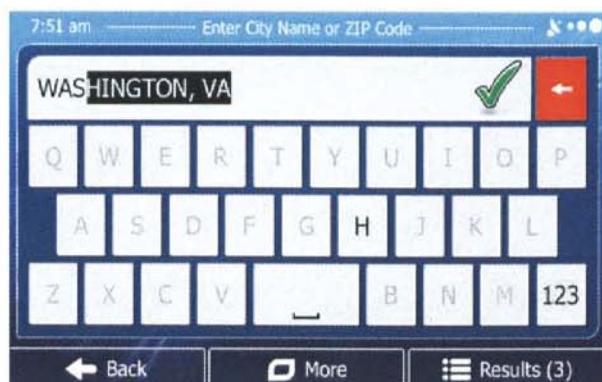

3. A “Select City” screen will appear. This will show a list of cities that match your selection. Touch the city you desire.

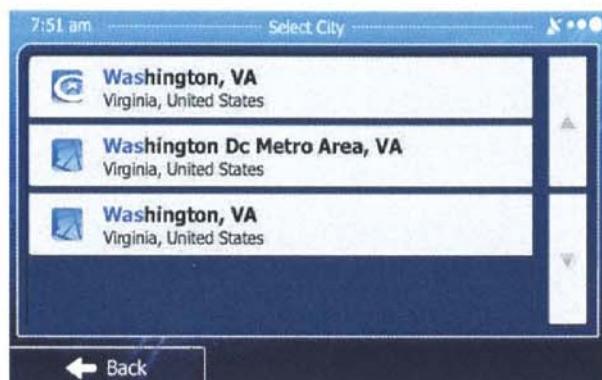

4. Select “Street” and the keyboard screen will appear.

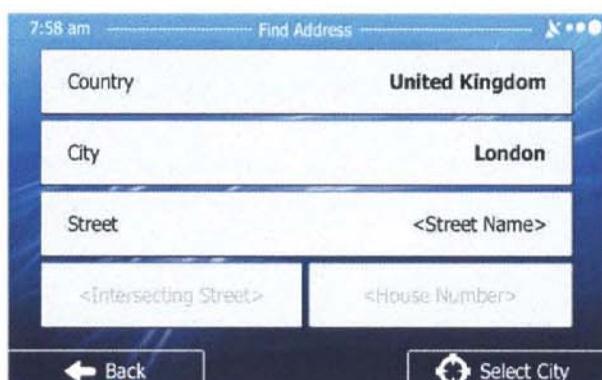


5. Start typing each letter of the street name.




6. A Street Name list will appear. Select the one you are looking for.

7. Repeat these steps for House number, or if you do not know it, you can select the SELECT STREET option.

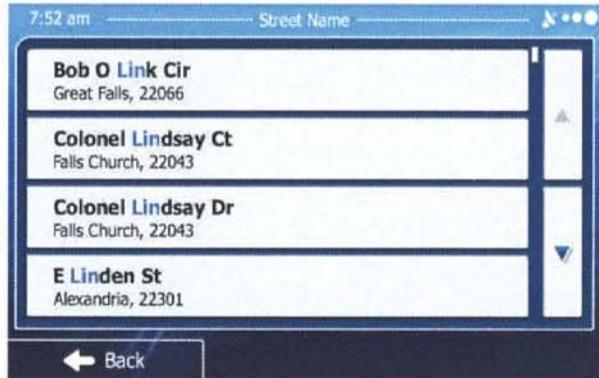

8. A map will appear.

✓ Next Click Next and a short summary of the route will flash on the screen for a few seconds.

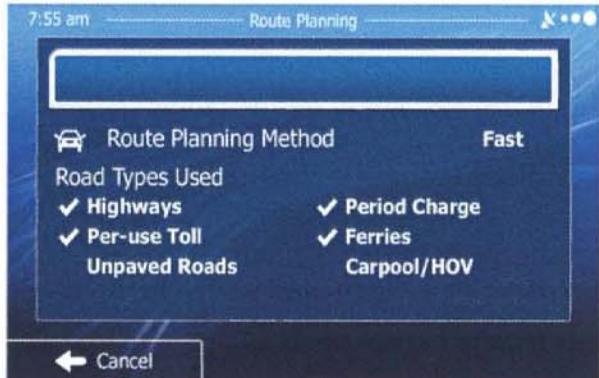

9. After the summary, the map appears showing the entire route.



Tap to start your journey.



Safety Information and Precautions

**WARNING! Please read and follow the following safety precautions.
Failure to follow the instructions below may increase
your risk of collision and personal injury.**

The Rosen Navigation software is not a substitute for your personal judgment. The route suggestions should never

supersede any local traffic regulation or your personal judgment and /or knowledge of safe driving practices. Prior to completing any maneuvers suggested by your Rosen Navigation software (for example, a U-turn or a left turn), verify that you can legally and safely complete the maneuver. Do not follow route suggestions if they direct you to perform an unsafe or illegal maneuver, would place you in an unsafe situation, or would route you into an area that you consider unsafe.

Do not use the Rosen Navigation software to locate emergency services (such as police, fire stations, hospitals, and clinics). The database may not include all emergency service providers. Use your own best judgment and ask for directions in these situations.

If the vehicle is in motion, only a passenger should program the Rosen Navigation software. The driver should not program the system unless the vehicle is parked in a safe location.

The Rosen Navigation software's map database provides information on suggested routes without regard to factors that may affect your driving experience or the time required to arrive at your destination. For example, the system does not reflect road detours, closures or construction, some road characteristics (e.g., road surface, slope or grade, weight or height restrictions, etc.), temporary traffic congestion, weather conditions, and similar factors.

Vehicle Position

The Rosen Navigation software's computer considers vehicle speed and heading changes, together with longitude and latitude information, to accurately determine vehicle heading and position on a digital map.

Map and Information Database

The map database used by your Rosen Navigation software was created using high-resolution aerial and land based data collection.

Car navigation maps are frequently updated. While the database was judged to be as accurate as possible at the time of its release, a map database can never be 100% accurate. Road information that is maintained in the map databases, such as turn restrictions or road names may change over time.

Errors or missing information in the map data are not covered by the Product Warranty. New and/or updates for the map data are the responsibility of the End-user.

End-User License Agreement

Please refer to the Rosen Navigation User's Manual to review and accept the terms and conditions in the End-User License before operating this product.

Navigation User Manual

TURN BY TURN VOICE AND MAP NAVIGATION

MILLIONS OF INCLUDED POINTS OF INTEREST

3D BUILDING AND TOPOGRAPHY VIEWS

MULTIPLE LANGUAGES PRE-LOADED

BUILT-IN QUICK REFERENCE PAGES

2D, 3D AND SMART ZOOM FEATURES



Thank you for choosing our product as your navigator. Start using your device right away. This document is the detailed description of the navigation software. You can easily discover the software while you are using it; however, we still recommend that you read this manual to fully understand the screens and features.

TABLE OF CONTENTS

<u>1 WARNINGS AND SAFETY INFORMATION</u>	2
<u>2 GETTING STARTED</u>	3
2.1 BUTTONS AND OTHER CONTROLS ON THE SCREEN	4
2.1.1 USING KEYBOARDS	5
2.1.2 BEYOND SINGLE SCREEN TAP	6
2.2 MAP SCREEN	7
2.2.1 NAVIGATING ON THE MAP	7
2.2.2 POSITION MARKERS	9
2.2.3 OBJECTS ON THE MAP	9
2.2.4 MANIPULATING THE MAP	14
2.2.5 QUICK MENU	15
2.2.6 CHECKING THE DETAILS OF THE CURRENT POSITION (WHERE AM I?)	18
2.3 NAVIGATION MENU	19
<u>3 ON-ROAD NAVIGATION</u>	20
3.1 SELECTING THE DESTINATION OF A ROUTE	20
3.1.1 ENTERING AN ADDRESS OR A PART OF THE ADDRESS	21
3.1.2 SELECTING THE DESTINATION FROM THE PLACES OF INTEREST	28
3.1.3 SELECTING A MAP LOCATION AS THE DESTINATION	37
3.1.4 SELECTING THE DESTINATION FROM YOUR FAVORITES	37
3.1.5 ENTERING THE COORDINATE OF THE DESTINATION	38
3.1.6 BUILDING A ROUTE FROM THE LIST OF DESTINATIONS (CREATE ROUTE)	40
3.2 VIEWING THE ENTIRE ROUTE ON THE MAP	41
3.3 CHECKING ROUTE PARAMETERS AND ACCESSING ROUTE RELATED FUNCTIONS	41
3.4 MODIFYING THE ROUTE	42
3.4.1 SELECTING A NEW DESTINATION WHEN ALREADY HAVING A ROUTE: NEW ROUTE, WAYPOINT OR FINAL DESTINATION	42
3.4.2 EDITING THE LIST OF DESTINATIONS (EDIT ROUTE)	43
3.4.3 PAUSING THE ACTIVE ROUTE	43
3.4.4 CANCELING THE ACTIVE ROUTE	43
3.4.5 CHECKING ROUTE ALTERNATIVES WHEN PLANNING THE ROUTE	44
3.4.6 CHECKING ROUTE ALTERNATIVES FOR AN EXISTING ROUTE	45
3.4.7 CHANGING THE ROAD TYPES USED IN ROUTE PLANNING	46
3.5 SAVING A LOCATION AS A FAVORITE DESTINATION	47

4 OFF-ROAD NAVIGATION	48
4.1 SELECTING THE DESTINATION OF THE ROUTE	48
4.2 NAVIGATING IN OFF-ROAD MODE	48
5 REFERENCE GUIDE	49
5.1 CONCEPTS	49
5.1.1 SMART ZOOM	49
5.1.2 DAYTIME AND NIGHT COLOR THEMES	49
5.1.3 ROUTE CALCULATION AND RECALCULATION	49
5.1.4 GREEN ROUTING	50
5.1.5 ROAD SAFETY CAMERAS AND OTHER PROXIMITY ALERT POINTS	51
5.1.6 SPEED LIMIT WARNING	52
5.2 SETTINGS MENU	52
5.2.1 SOUND AND WARNINGS	53
5.2.2 CUSTOMIZE QUICK MENU	55
5.2.3 ROUTE SETTINGS	56
5.2.4 GREEN ROUTING SETTINGS	58
5.2.5 MAP SETTINGS	59
5.2.6 VISUAL GUIDANCE SETTINGS	60
5.2.7 DISPLAY SETTINGS	61
5.2.8 REGIONAL SETTINGS	61
5.2.9 TRIP MONITOR SETTINGS	61
6 GLOSSARY	62
7 END USER LICENSE AGREEMENT	64
8 COPYRIGHT NOTE	67

1 Warnings and Safety information

The navigation system helps you find your way to your destination with a connected GPS receiver. The software does not transmit your GPS position; others cannot track you.

It is important that you look at the display only when it is safe to do so. If you are the driver of the vehicle, we recommend that you operate your software before you start your journey. Plan the route before your departure and stop if you need to change the route.

You must obey the traffic signs and follow the road geometry. If you deviate from the recommended route, your software changes the instructions accordingly.

Never place your device where it obstructs the driver's view, where it is in the deployment zone of an airbag or where it might cause injuries in an accident.


For more information, consult the End User License Agreement (page 64).

2 Getting started

The software is optimized for in-car use. There is no need to use a stylus. You can use it easily by tapping the screen buttons and the map with your fingertips.

When using the navigation software for the first time, an initial setup process starts automatically. Do as follows:

1. Select the written language of the application interface. Later you can change it in Regional settings (page 61).

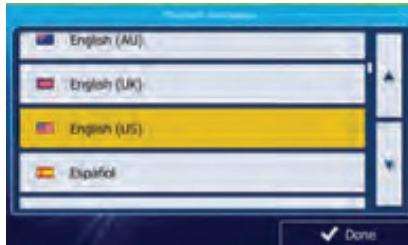


2. Read the End User License Agreement. Tap Accept to continue.




3. The Configuration wizard starts. Tap Next to continue.
4. Select the language and speaker used for voice guidance messages. Later you can change it in Sound and Warnings settings (page 61).



5. If needed, modify the time format and unit settings. Later you can change them in Regional settings (page 61).

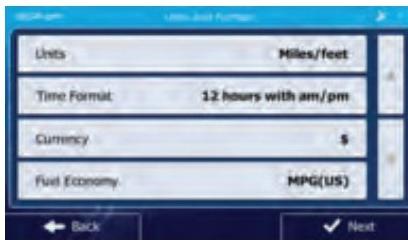

6. If needed, modify the default route planning options. Later you can change them in Route settings (page 1).

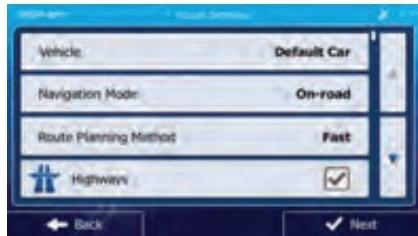

7. The initial setup is now complete. The Configuration wizard can be restarted later from the Settings menu (page 52).


After the initial setup, the Map screen appears and you can start using the software.

2.1 Buttons and other controls on the screen

When you are using the software, you usually tap buttons on the touch screen.

You only need to confirm selections or changes if the application needs to restart, it needs to perform a major reconfiguration, or you are about to lose some of your data or settings. Otherwise, the software saves your selections and applies the new settings without confirmation as soon as you use the controls.

Type	Example	Description	How to use it
Button		Tap it to initiate a function, to open a new screen, or to set a parameter.	Tap it once.
Button with value		Some buttons display the current value of a field or setting. Tap the button to change the value. After the change, the new value is shown on the button.	Tap it once.
Icon		Shows status information.	Some icons also function as a button. Tap them once.
List		When you need to select from several options, they appear in a list.	Grab the list anywhere and slide your finger up or down. Depending on the speed of the sliding, the list will scroll fast or slow, only a bit or till the end. Alternatively, move between pages with the and buttons and tap the value that you want.

Radio button		When there are only a few choices, radio buttons may be used instead of lists. Only one value can be selected.	Tap one of the buttons to select a new value.
Switch		When there are only two choices, a checkmark shows whether the feature is enabled.	Tap it to turn the switch on or off.
Slider		When a feature can be set to different values in a range, the software shows an indicator on a gauge that displays and sets the value.	<ul style="list-style-type: none"> Drag the handle to move the slider to its new position. Tap the slider where you want the handle to appear; the thumb jumps there.
Virtual keyboard		Alphabetic and alphanumeric keyboards to enter text and numbers.	Each key is a touch screen button.

2.1.1 Using keyboards



You only need to enter letters or numbers when you cannot avoid it. You can type with your fingertips on the full-screen keyboards and you can switch between various keyboard layouts, for example English, Greek or numerical.

Task	Instruction
Switching to another keyboard layout, for example from an English keyboard to a Greek keyboard	Tap the  button and select the new keyboard layout from the list.
Correcting your entry on the keyboard	Tap  to remove the unneeded character(s). Tap and hold the button to delete several characters or the entire input string.
Entering a space, for example between a first name and a family name or in multi-word street names	Tap the  button at the bottom center of the screen.

Entering numbers and symbols	Tap  to switch to a keyboard offering numeric and symbol characters.
Finalizing the keyboard entry (accepting the suggested search result)	Tap  .
Finalising the keyboard entry (opening the list of search results)	Tap  .
Finalising the keyboard entry (saving your input)	Tap  .
Canceling the keyboard entry (returning to the previous screen)	Tap  .

2.1.2 Beyond single screen tap

You usually need to tap the screen only once. However, some useful features can be accessed with combined touch screen tapping. Those are the following:

Action	Details
Tapping and holding the screen	<p>Tap and keep pressing the following buttons to reach extra functions:</p> <ul style="list-style-type: none"> Tap and hold  on list and menu screens: the Map screen appears. Tap and hold any of the  buttons on the Map screen: you can rotate, tilt or scale the map continuously. Tap and hold  on keyboard screens: you can delete several characters quickly. Tap and hold  in long lists: you can scroll pages continuously.

Gestures (drag&drop)	You need to drag and drop the screen only in cases like: <ul style="list-style-type: none"> • Moving the handle on a slider. • Scrolling the list: grab the list anywhere and slide your finger up or down. Depending on the speed of the sliding, the list will scroll fast or slow, only a bit or till the end. • Moving the map in map browsing mode: grab the map, and move it in the desired direction.
----------------------	---

2.2 Map screen

2.2.1 Navigating on the map


This map shows the current position (the Vehimarker, a red arrow by default), the recommended route (an orange line), and the surrounding map area.

When there is no GPS position, the Vehimarker is transparent. It shows your last known position.

You see colored dots circling around a satellite symbol in the top left corner. The more green dots you see, the closer you are to get the valid GPS position.



When GPS position is available, the Vehimarker is displayed in full color, now showing your current position.

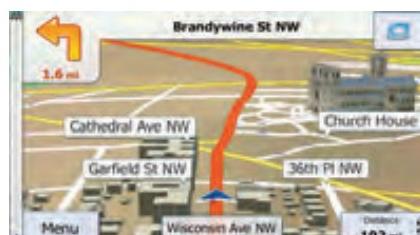

There are screen buttons and data fields on the screen to help you navigate. During navigation, the screen shows route information.

By default, only one data field is displayed in the bottom right corner. Tap this field to see all route data fields.



Tap any of the data fields to suppress others and display only the selected one. The data fields are different when you are navigating an active route and when you have no specified destination (the orange line is not displayed).

Default data fields when cruising without a destination (tap and hold any of the fields to change its value):

Field	Description
Speed 61 km/h	Shows your current speed given by the GPS receiver.
Speed Limit 70 km/h	Shows the speed limit of the current road if the map contains it.
Time 17:11	Shows the current time corrected with time zone offset. The accurate time comes from the GPS satellites, and the time zone information comes from the map or it can be set manually in Regional settings. (The current time is always displayed in the top left corner of menu screens.)

Default data fields when navigating a route (tap and hold any of the fields to change its value):

Field	Description
Distance 16.9 km	Shows the distance you need to travel on the route before reaching your final destination.
Time Left 0:16	Shows the time needed to reach the final destination of the route based on information available for the remaining segments of the route. Historical traffic data or traffic patterns are also taken into account whenever such information exists. The calculation cannot take into account traffic jams and other possible delays. Historical traffic data can be taken into account if data is available.
Arrival Time 17:22	Shows the estimated arrival time at the final destination of the route based on information available for the remaining segments of the route. Historical traffic data or traffic patterns are also taken into account whenever such information exists. The calculation cannot take into account traffic jams and other possible delays. Historical traffic data can be taken into account if data is available.

2.2.2 Position markers

2.2.2.1 Vehimarker and Lock-on-Road

When your GPS position is available, the software marks your current position with the Vehimarker. By default, this marker is a red arrow, but you can change this icon in Settings.

When on-road navigation is selected, the Vehimarker may not show your exact GPS position and heading. If roads are near, it is aligned to the nearest road to suppress GPS position errors, and the direction of the icon is aligned to the direction of the road.

If you select off-road navigation: The Vehimarker is at your exact GPS position. The direction of the icon shows your current heading.

2.2.2.2 Selected map location (Cursor) and selected map object

You can mark a map location in the following ways:

- Tap the map when navigating,
- Tap the map when you are asked to confirm the destination at the end of a search, or
- Tap the map in Find on Map (page 1)

When a map location is selected, the Cursor appears at the selected point on the map. The Cursor is

displayed with a radiating red dot () to make it visible at all zoom levels.

The location of the Cursor can be used as the destination of the route, you can search for Places around it, or you can save this location as one of your Favorite destinations.

You can also select some of the objects on the map. If you tap the map at the icon of a Place of Interest, the Place will be selected (you see a red circling border around the object), and you can get information about this object or use it as a route point.

2.2.3 Objects on the map

2.2.3.1 Streets and roads

The software shows the streets in a way that is similar to how the paper road maps show them. Their width and colors correspond to their importance: you can easily tell a freeway from a small street.

2.2.3.2 Turn preview and Next street

When navigating a route, the top section of the Map screen shows information about the next route event (maneuver) and the next street or the next city/town.



There is a field in the top left corner that displays the next maneuver. Both the type of the event (turn, traffic circle, exiting freeway, etc.) and its distance from the current position are displayed.

A smaller icon shows the type of the second next maneuver if it is near the first one. Otherwise, only the next maneuver is displayed.



Most of these icons are very intuitive. The following table lists some of the frequently shown route events. The same symbols are used in both fields:

Icon	Description
	Turn left.
	Turn right.
	Turn back.
	Bear right.
	Turn sharp left.
	Keep left.
	Continue straight in the intersection.
	Go left on the traffic circle, 3rd exit (next maneuver).

	Enter traffic circle (second next maneuver).
	Enter freeway.
	Exit freeway.
	Board ferry.
	Leave ferry.
	Approaching a waypoint.
	Approaching the destination.

2.2.3.3 Lane information and Signposts

When navigating on multilane roads, it is important to take the appropriate lane in order to follow the recommended route. If lane information is available in the map data, the software displays the lanes and their directions using small arrows at the bottom of the map. Highlighted arrows represent the lanes you need to take.

Where additional information is available, signposts substitute arrows. Signposts are displayed at the top of the map. The color and style of the signposts are similar to the real ones you can see above road or by the roadside. They show the available destinations and the number of the road the lane leads to.

All signposts look similar when cruising (when there is no recommended route). When navigating a route, only the signpost that points to the lane(s) to be taken is displayed in vivid colors; all others are darker.


If you want to hide the currently displayed signposts, tap any of them and the normal Map screen returns until new signpost information is received.



2.2.3.4 Junction view

If you are approaching a freeway exit or a complex intersection and the needed information exists, the map is replaced with a 3D view of the junction. The lanes you need to take are displayed with arrows. Signposts can also be present if information is available.

If you want to hide the currently displayed junction, tap the picture and the Map screen returns.

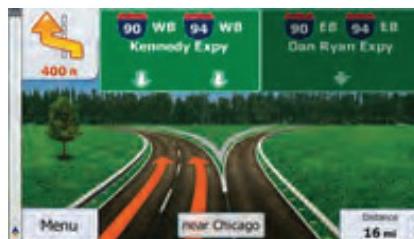


2.2.3.5 Freeway exit services

You may need a gas station or a restaurant during your journey. This feature displays a new button on the map when you are driving on freeways.



Tap this button to open a panel with the details of the next few exits or service stations.

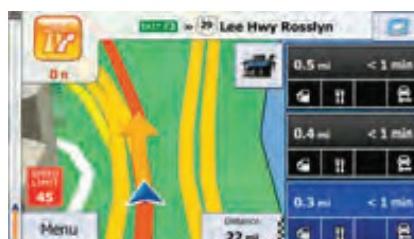

Tap any of them to display it on the map and add it as a waypoint to your route if needed.

If you want to display other types of Places for the exits, you can change the icons in Visual Guidance settings (page 60).

2.2.3.6 3D object types

Your software supports the following 3D object types:

Type	Description
3D terrain	3D terrain map data shows changes in terrain, elevations or depressions in the land when you view the map in 2D, and use it to plot the route map in 3D when you navigate. Hills and mountains are shown in the background of the 3D map, and illustrated by color and shading on the 2D map.
Elevated roads	Complex intersections and vertically isolated roads (such as overpasses or bridges) are displayed in 3D.
3D landmarks	Landmarks are 3D artistic or block representations of prominent or well-known objects.
3D buildings	3D block representation of full city building data containing actual building size and position on the map.

2.2.3.7 Elements of the active route

Your software shows the route in the following way:

Symbol	Name	Description
	Current GPS position and Start point	Your current position displayed on the map. If roads are near, it is aligned to the nearest road. Normally if GPS position is available, the route starts from the current position. If there is no valid GPS position, your software uses the last known position as the start point.
	Waypoint (intermediate destination)	An intermediate destination of the route before reaching the final destination.
	Destination (end point)	The final destination of the route.
	Route color	The route always stands out with its color on the map, both in daytime and in night color mode.
	Streets and roads that are excluded from the navigation	You can choose whether you want to use or avoid certain road types (page 1). However, when your software cannot avoid such roads, the route will include them and it will show them in a color that is different from the route color.

2.2.4 Manipulating the map

Tap the map anywhere to browse it during navigation. The map stops following the current position (the Vehimarker, a red arrow by default, is not locked in a fix position on the screen any more) and control buttons appear to help you modify the map view.




Action	Button(s)	Description
Moving the map with drag&drop	No buttons	You can move the map in any direction: tap and hold the map, and move your finger towards the direction you want to move the map.
Zooming in and out	,	<p>Changes how much of the map is displayed on the screen.</p> <p>Your software uses high-quality vector maps that let you examine the map at various zoom levels, always with optimized content. It always displays street names and other text with the same font size, never upside-down, and you only see the streets and objects that you need.</p> <p>Map scaling has a limit in 3D map view mode. If you zoom out further, the map switches to 2D view mode.</p> <p>Tap the button once to modify the view in large steps, or tap and hold the button to modify it continuously and smoothly.</p>
Tilting up and down	,	<p>Changes the vertical view angle of the map in 3D mode.</p> <p>Tap the button once to modify the view in large steps, or tap and hold the button to modify it continuously and smoothly.</p>
Rotating left and right	,	<p>Changes the horizontal view angle of the map.</p> <p>Tap the button once to modify the view in large steps, or tap and hold the button to modify it continuously and smoothly.</p>
2D or 3D view	,	Tap this button to switch between the 3D perspective and 2D top-down map view modes.

Compass in 2D map view mode		The direction of the compass shows North. Tap the button to switch to North-up view, and then tap again to rotate the map in the previous direction.
Compass in 3D map view mode		The direction of the compass shows North. Tap the button to switch to North-up view, and then tap again to rotate the map in the previous direction.
Location information		Tap this button to open a new screen with information about the selected map point, the Cursor.
Return to normal navigation		Tap this button to move the map back to follow the current GPS position. Automatic map rotation is also re-enabled. The map manipulation buttons disappear and navigation continues.
Additional options		Tap this button to open a list of additional features like saving the Cursor as a Favorite destination, or searching for Places around the Cursor.
Select destination		Tap this button to select the Cursor as a new destination. The route is automatically calculated.

2.2.5 Quick menu

The Quick menu is a selection of controls and functions that are frequently needed during navigation. It can be opened directly from the Map screen by tapping .

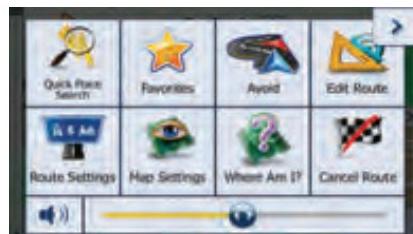

The menu will close after a few seconds of inactivity or if you tap .

The menu will also close if you initiate simple controls like muting the device. In other cases tapping a button will open a new screen with options.

Most of these functions are shortcuts. They are accessible from the menu system.

There are more functions available than the number of buttons in the menu. In Settings, you can choose the function of each button (page 55). The following options are available:

Button	Description	Shortcut for
Master Volume slider	This slider adjusts the volume of the voice guidance.	More / Settings / Sound and Warnings / Volume / Voice Guidance slider
	This switch mutes all sounds of the device. Tap again to re-enable sounds.	More / Settings / Sound and Warnings / Volume / Master switch
	This function lets you search for a Place along your route or around your current location if there is no route calculated.	Find / Find Places / Quick Search (page 28)
	This button opens the list of your Favorite destinations.	Find / Favorite (page 37)
	This button opens the History list. You can select one of your previous destinations.	Find / History (page Error! Bookmark not defined.)
	This button opens the route editing function.	My Route / Edit Route
	This button opens the route related settings.	More / Settings / Route Settings (page 1)
	This button opens the map related settings.	More / Settings / Map Settings (page 59)
	This button opens a special screen with information about the current position and a button to search for nearby emergency or roadside assistance. For details, see the next chapter.	n/a
	This button cancels the route and stops navigation. The button is replaced with the next one if waypoints are given.	My Route / Cancel Route (page 43)
	This button skips the next waypoint from the route.	n/a

 Overview	This button opens a 2D map scaled and positioned to show the entire route.	My Route / Overview (page 41)
 Visual Guidance	This button opens the Visual Guidance settings screen.	More / Settings / Visual Guidance (page 60)
 Avoid	This button lets you bypass parts of the recommended route.	My Route / Avoidances
 Trip Monitor	This button opens the Trip Monitor screen where you can manage your previously saved trip logs and track logs.	More / Trip Monitor (page 1)
 Itinerary	This button opens the list of maneuvers (the itinerary).	Tap the top of the Map screen during navigation.
 Save Route	With this function you can save the active route for later use.	My Route / More / Save Route
 Load Route	With this function you can replace the active route with a previously saved route.	My Route / More / Load Route
 Find Places	With this function you can search for Places of Interest in various different ways.	Find / Find Places (page 28)
 GPS Info	This button opens the GPS Information screen with satellite position and signal strength information.	Tap the top of the Map screen when there is no GPS reception

2.2.6 Checking the details of the current position (Where Am I?)

This screen contains information about the current position (or about the last known position if GPS reception is not available) and a button to search for useful Places nearby.



You can access this screen from the map in one of the following ways:

- If the current street is displayed below the Vehimarker (the current position on the map), tap it to open the Where Am I? screen.



- Open the Quick menu and tap the  button.

Information on this screen:

-   : Latitude and Longitude (coordinate of the current position in WGS84 format).
-  : Altitude (elevation information coming from the GPS receiver - often inaccurate).
-  : House number on the left.
-  : House number on the right.
- In the middle of the screen you can see whether the position is current, or the time left since it was last updated.
- Address details (when available) of the current position are also displayed at the bottom.

You can also perform some actions on this screen:

Tap  **More** to save the current position as a Favorite destination.

Help Nearby

You can also search for assistance near your current position. Tap  to open a new screen for the Quick search:




The following services can be searched around the current position or the last known position:

-  : Car repair and roadside assistance services
-  : Medical and emergency services
-  : Police stations
-  : Gas stations



Tap any of the buttons, select a Place from the list, and navigate to it.

2.3 Navigation menu

You can reach all parts of the software from the Navigation menu.

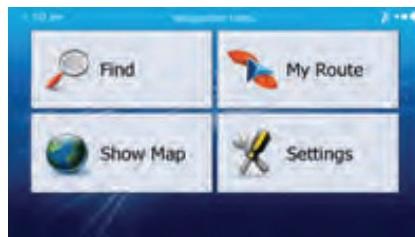

You have the following options:

-  Tap  to select your destination by entering an address or selecting a place of interest, a location on the map or one of your Favorite destinations. You can also look up your recent destinations from the Smart History or enter a coordinate.

- Tap  **My Route** to display the route parameters and the route in its full length on the map. You can also perform route-related actions such as editing or canceling your route, setting a start point for the route, picking route alternatives, avoiding parts of the route, simulating navigation or adding the destination to your Favorites.
- Tap  **Settings** to customize the way the navigation software works.
- Tap  **Show Map** to start navigating on the map. The button itself is a miniature live map that shows your current position, the recommended route and the surrounding map area. Tap the button to enlarge the map to the full screen.

3 On-road navigation

When first started, your Rosen Navigation System calculates routes using the road network of the high quality vector maps provided with the product.

You can set up your route in different ways:

- If you need a route for immediate navigation, you can select the destination and start navigating to it right away (normal navigation).
- You can also plan a route independently of your current GPS position or even without GPS reception (to achieve this, you need to turn off the GPS receiver and set a new starting point in My Route / Edit Route by tapping the flag icon at the current position).

You can plan routes with multiple destinations. Select the first destination. Then select a second destination ad add it to your route to create a multi-point route. You can add as many destinations to your route as you like.

You can also use your Rosen Navigation System for off-road navigation. For details, see page 48.

3.1 Selecting the destination of a route

The software offers you several ways of choosing your destination:

- Enter a full address or a part of an address, for example a street name without a house number or the names of two intersecting streets (page 21).
- Enter an address with ZIP code (page **Error! Bookmark not defined.**). This way you do not need to select the name of the city and the search for street names might be faster as well.
- Use a built-in Place of Interest as your destination (page 28).
- Select a location on the map with the Find on Map feature (page 1).
- Use a previously saved Favorite destination (page 37).
- Select a location from the History of previously used destinations (page **Error! Bookmark not defined.**).
- Enter the coordinate of the destination.

3.1.1 Entering an address or a part of the address

If you know at least a part of the address, it is the quickest way to select the destination of the route.

Using the same screen, you can find an address by entering:

- the exact address, including house number
- the center of a city/town
- an intersection
- the midpoint of a street
- any of the above, starting the search with the ZIP code (page **Error! Bookmark not defined.**)




3.1.1.1 Entering an address (United States)


To enter an address as the destination, do as follows:

Menu

1. If you are on the Map screen, tap  to return to the Navigation menu.




2. In the Navigation menu, tap the following buttons:  
3. By default, the software proposes the country and state where you are. If needed, tap  , enter the first few letters of the destination country or state on the keyboard, and select one from the list. If you select a country without a state, you can search for a city/town in all its states.

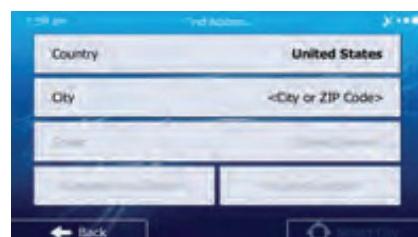

4. Select a new city/town:




- a. Tap . The city/town of your current location is offered by default. For a local search, tap  to accept it, otherwise continue with entering the destination city/town name.

- b. Start entering the name of the city/town on the keyboard.
- c. Find the city/town you need:

- The most likely city/town name is always shown in the input field. To accept it, tap 

- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, tap ).

Select the city/town from the list.

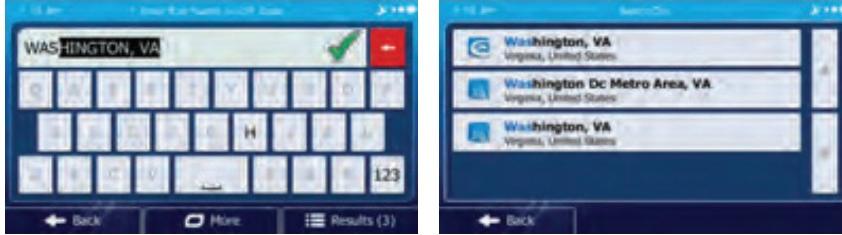


5. Enter the street name:

 Street

- Tap .
- Start entering the street name on the keyboard.
- Find the street you need:

- The most likely street name is always shown in the input field. To accept it, tap .
- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, tap ).

Select the street from the list.

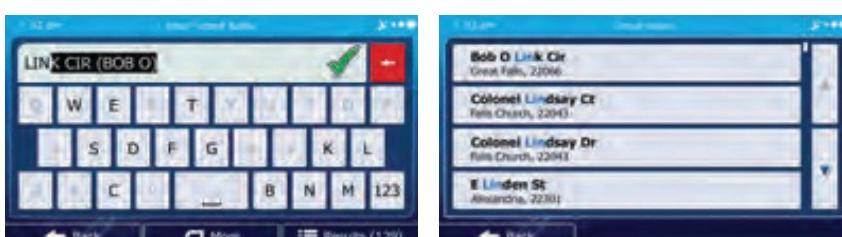


6. Enter the house number:

 <House Number>

- Tap .
- Enter the house number on the keyboard. (To enter letters, tap ).
- Tap  to finish entering the address. (If the entered house number cannot be found, the midpoint of the street is selected as the destination.)



7. A full screen map appears with the selected point in the middle. If necessary, tap the map somewhere else to modify the destination. The Cursor (!) appears at the new location. Tap to confirm the destination, or tap to select a different destination.
8. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap to modify route parameters, or tap and start your journey.

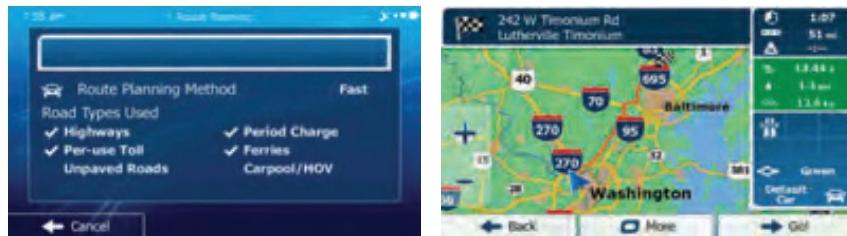

Tip! If you know that you will use this destination frequently, before tapping to confirm the destination, put it on the list of your Favorites first: tap then (with a star icon), give a name for the new Favorite, and tap to save the location. The map with the destination returns automatically. Now you can start your journey.

3.1.1.2 Entering the midpoint of a street as the destination

You can navigate to the midpoint of a street if the house number is not available:

- If you are on the Map screen, tap to return to the Navigation menu.
- In the Navigation menu, tap the following buttons: and .
- Select the country, state and city as described earlier (page 21).

4. Enter the street name:




- Tap
- Start entering the street name on the keyboard.
- Find the street you need:


- The most likely street name is always shown in the input field. To accept it, tap
- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, tap). Select the street from the list.



5. Instead of entering the house number, tap . The midpoint of the street is selected as the destination.

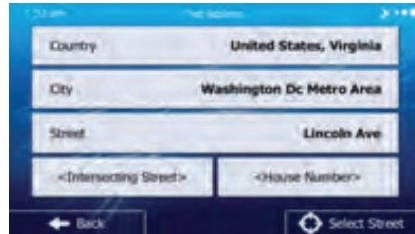

- A full screen map appears with the selected point in the middle. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap to confirm the destination, or tap to select a different destination.
- After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap to modify route parameters, or tap and start your journey.

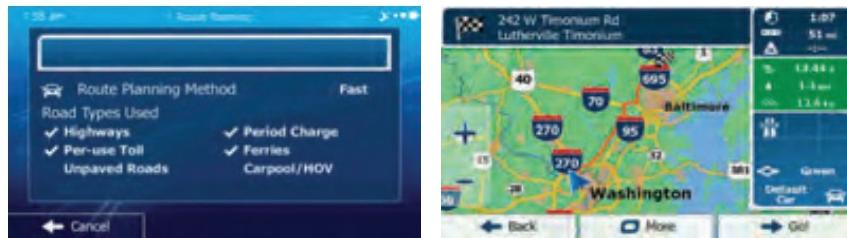

3.1.1.3 Selecting an intersection as the destination

To enter an address as the destination, do as follows:

Menu

- If you are on the Map screen, tap **Menu** to return to the Navigation menu.




- In the Navigation menu, tap the following buttons:
- Select the country, state and city as described earlier (page 21).
- Enter the street name:

Street

- Tap **Street**.
- Start entering the street name on the keyboard.
- Find the street you need:

- The most likely street name is always shown in the input field. To accept it, tap
- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, tap **Results**). Select the street from the list.

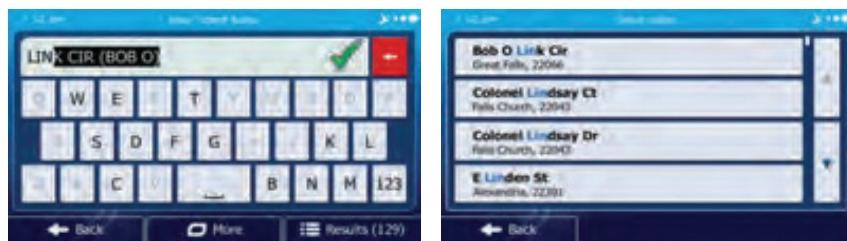

- Enter the intersecting street name:


<Intersecting Street>

- Tap **<Intersecting Street>**.
 - If only a few intersecting streets exist, their list appears immediately.
 - In case of a longer street, the keyboard screen appears. Start entering the name of the intersecting street on the keyboard. As soon as the street names that match the

entered string can be shown on one screen, their list appears automatically. Select from the list.



6. A full screen map appears with the selected point in the middle. If necessary, tap the map somewhere else to modify the destination. The Cursor (!) appears at the new location. Tap **Next** to confirm the destination, or tap **Back** to select a different destination.
7. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap **More** to modify route parameters, or tap **Go!** and start your journey.

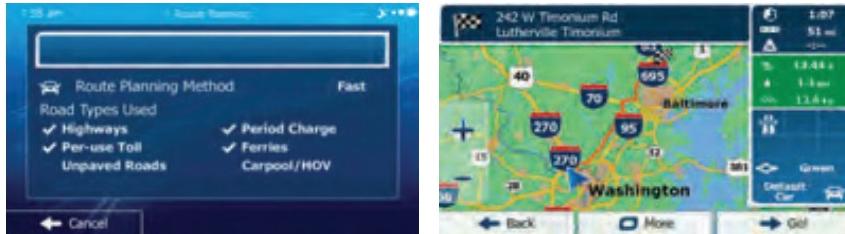

3.1.1.4 Selecting a city/town center as the destination

The city/town center is not the geometric center of the city but an arbitrary point the map creators have chosen. In towns and villages, it is usually the most important intersection; in larger cities, it is one of the important intersections.

1. If you are on the Map screen, tap **Menu** to return to the Navigation menu.
2. In the Navigation menu, tap the following buttons: **Find** and **Find Address**.
3. Select the country and state as described earlier (page 21).
4. Select the destination city/town:
 - a. Tap **City**.
 - b. Start entering the name of the city/town on the keyboard.
 - c. Find the city/town you need:

- The most likely city/town name is always shown in the input field. To accept it, tap 


- If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears

automatically, tap ). Select the city/town from the list.





- Instead of entering the street name, tap . This way the center of the displayed city/town becomes the destination of the route.

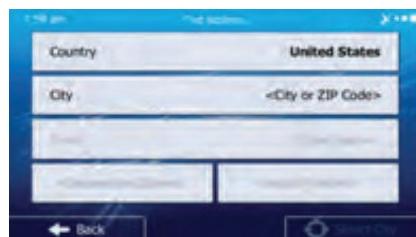


- A full screen map appears with the selected point in the middle. If necessary, tap the map

 somewhere else to modify the destination. The Cursor () appears at the new location. Tap  to confirm the destination, or tap  to select a different destination.

- After a short summary of the route parameters, the map appears showing the entire route. The

route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.

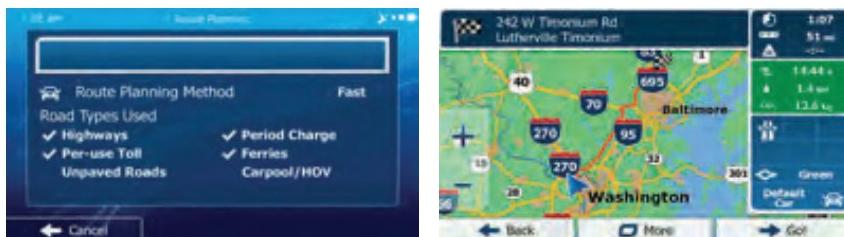

3.1.1.5 Tips on entering addresses quickly

- When you are entering the name of a city/town or a street:
 - Only those letters are offered on the keyboard that appear in possible search results. All other characters are grayed out.
 - As you are typing, the most likely result is always displayed in the input field. If the guess is correct, tap  to select it.



- After entering a couple of letters, tap  to list the items that contain the specified letters.
- You can speed up finding an intersection:
 - Search first for the street with a less common or less usual name; fewer letters are enough to find it.
 - If one of the streets is shorter, search for that one first. You can then find the second one faster.
- You can search for both the type and the name of a road. If the same word appears in several names, for example in the name of streets, roads and avenues, you can obtain the result faster if you enter the first letter of the street type: For example, enter 'PI A' to obtain Pine Avenue and skip all Pine Streets and Pickwick Roads.
- You can also search in ZIP codes. As ZIP codes consist of only a few characters, this is usually faster than entering the name of the city/town.

3.1.2 Selecting the destination from the Places of Interest

You can select your destination from the Places of Interest included with your software.

Using the same screen, you can find a Place in different ways:

- with the Quick search feature, you can quickly find a nearby Place by its name
- with the Preset search feature, you can find frequently searched types of Places with only a few screen taps
- you can search for a Place by its category
- you can search for a Place by its name

In addition, you can search for special services from the 'Where Am I?' screen.


3.1.2.1 Quick search for a Place of Interest

The Quick search feature lets you quickly find a Place by its name. The search is always carried out

- along the recommended route if it exists or
 - around your current location if there is no destination given.
1. Start the Quick search function:

- If you are on the Map screen, tap  and then tap 
- If you are in the Navigation menu, tap  and then tap  

2. Using the keyboard, start entering the name of the Place.

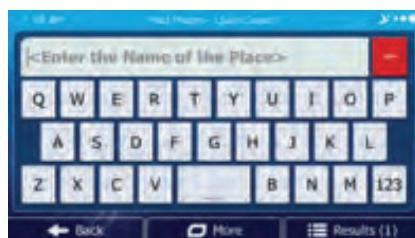

3. After entering a few letters, tap  to open the list of Places with names containing the entered character sequence.




4. (optional) The Places in the list are ordered by the length of the necessary detour (when navigating a route) or by their distance from the current position (when no destination is given). If you need to


reorder the list, tap .

5. Browse the list if necessary and tap one of the list items. A full screen map appears with the selected point in the middle. The name and address of the Place is displayed at the top of the screen.

6. (optional) Tap  to see the details of the selected Place. Tap  to return to the map.


7. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  to confirm the destination, or tap  to select a different destination.


8. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  More to modify route parameters, or tap  Go! and start your journey.

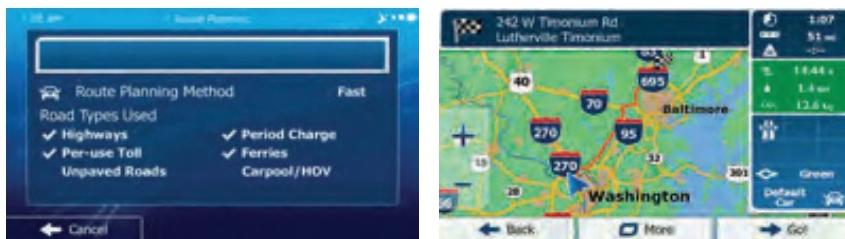

3.1.2.2 Searching for a Place of Interest using preset categories

The Preset search feature lets you quickly find the most frequently selected types of Places.

- If you are on the Map screen, tap  Menu to return to the Navigation menu.

- In the Navigation menu, tap the following buttons:  Find and  Find Places



- The preset search categories appear:




- If an active route exists, gas stations are searched along the route.
- If there is no active route (destination is not selected), they are searched around the current position.
- If the current position is not available either (no GPS signal), they are searched around the last known position.



- If an active route exists, parking lots are searched around the destination of the route.
- If there is no active route (destination is not selected), they are searched around the current position.
- If the current position is not available either (no GPS signal), they are searched around the last known position.

- 
Restaurant Along Route:
 - If an active route exists, restaurants are searched along the route.
 - If there is no active route (destination is not selected), they are searched around the current position.
 - If the current position is not available either (no GPS signal), they are searched around the last known position.
- 
Accommodation At My Destination:
 - If an active route exists, accommodation is searched around the destination of the route.
 - If there is no active route (destination is not selected), they are searched around the current position.
 - If the current position is not available either (no GPS signal), they are searched around the last known position.

4. Tap any of the quick search buttons to get an instant list of Places.

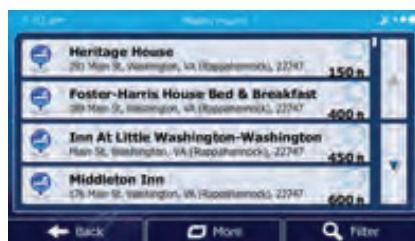

5. (optional) The Places in the list are ordered by their distance from the current or last known position, from the destination or by the length of the necessary detour. If you need to reorder the

list, tap  **More**.

6. Browse the list if necessary and tap one of the list items. A full screen map appears with the selected point in the middle. The name and address of the Place is displayed at the top of the screen.

7. (optional) Tap  to see the details of the selected Place. Tap  **Back** to return to the map.

8. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  **Next** to confirm the destination, or tap  **Back** to select a different destination.

9. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  **More** to modify route parameters, or tap  **Go!** and start your journey.

3.1.2.3 Searching for a Place of Interest by name

You can search for Places of Interest by their names. You can search around different locations or along your route in the whole Place database or in one Place category or subcategory only.

Menu

1. If you are on the Map screen, tap  to return to the Navigation menu.



2. In the Navigation menu, tap the following buttons:



3. Tap .

4. Select the area around which the Place should be searched for:

Around Here

- Tap  to search around the current position or if it is not available, around the last known position. (The result list will be ordered by the distance from this position.)

In a City

- Tap  to search for a place within a selected city/town. (The result list will be ordered by the distance from the center of the selected city/town.)

Around Destination


- Tap  to search for a place around the destination of the active route. (The result list will be ordered by the distance from the destination.)

Along Route

- Tap  to search along the active route, and not around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as searching for upcoming gas stations or restaurants. (The result list will be ordered by the length of the necessary detour.)



In a City


5. (optional) If you have selected , select the city/town to search in.



6. Select one of the main Place categories (e.g. Accommodation) to search in or tap




to search among all Places.

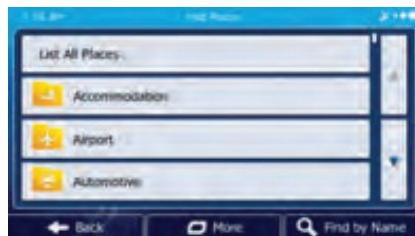

7. Select one of the Place subcategories (e.g. Hotel or Motel) to search in or tap



to search in the selected Place category.

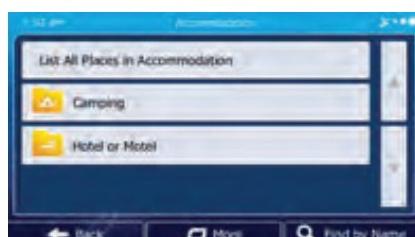

8. Tap



if you have not done it before.




9. Using the keyboard, start entering the name of the Place.



Results

10. After entering a few letters, tap  to open the list of Places with names containing the entered character sequence.

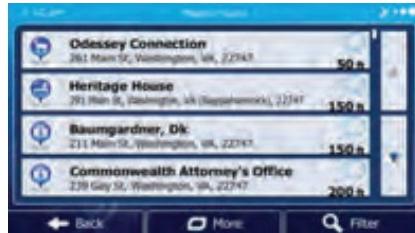

11. (optional) The Places in the list are ordered by their distance from the current or last known position, from the selected city/town, from the destination or by the length of the necessary detour.

 More

If you need to reorder the list, tap  More

12. Browse the list if necessary and tap one of the list items. A full screen map appears with the selected point in the middle. The name and address of the Place is displayed at the top of the screen.



 Back

13. (optional) Tap  to see the details of the selected Place. Tap  Back to return to the map.



14. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears

 Next

at the new location. Tap  to confirm the destination, or tap  Back to select a different destination.


15. After a short summary of the route parameters, the map appears showing the entire route. The

 More

route is automatically calculated. Tap  to modify route parameters, or tap

 Go!

and start your journey.

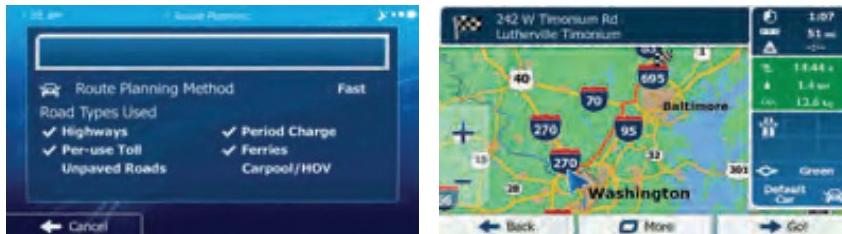


3.1.2.4 Selecting nearby assistance from 'Where Am I?'

You can quickly search for nearby assistance from the 'Where Am I?' screen.



1. On the Map screen, tap  to open the Quick menu.

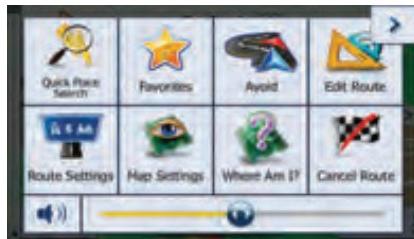


2. Tap , and then 



3. Preset search categories appear, all for searching around the current position (or around the last known position if the current position is not available):

-  : Car repair and roadside assistance services
-  : Medical and emergency services
-  : Police stations
-  : Gas stations

4. Tap any of the quick search buttons to get an instant list of that type of Places.

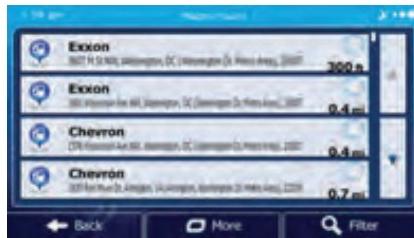

5. (optional) The Places in the list are ordered by their distance from the current or last known position, from the selected city/town, from the destination or by the length of the necessary detour.

 More


If you need to reorder the list, tap 

6. Browse the list if necessary and tap one of the list items. A full screen map appears with the selected point in the middle. The name and address of the Place is displayed at the top of the screen.



7. (optional) Tap  to see the details of the selected Place. Tap  to return to the map.


8. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  to confirm the destination, or tap  to select a different destination.

9. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.

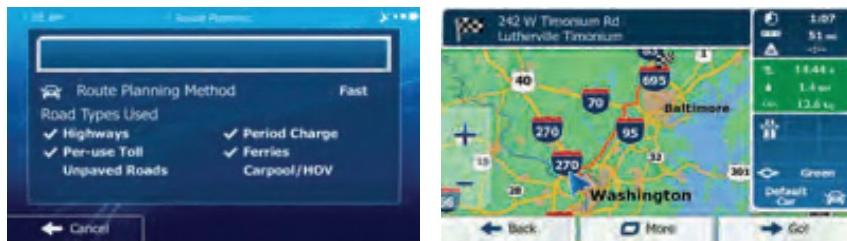

3.1.3 Selecting a map location as the destination

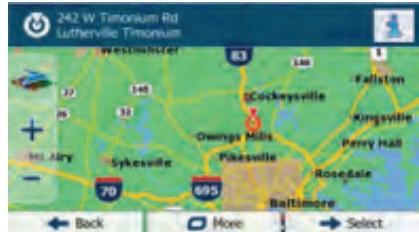1. If you are on the Map screen, tap  to return to the Navigation menu.
2. In the Navigation menu, tap the following buttons:  
3. Locate your destination on the map: move and scale the map as needed.

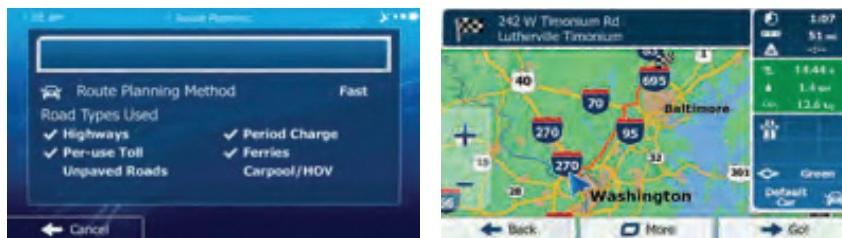4. Tap the location that you want to select as your destination. The Cursor () appears.
5. Tap  to select the Cursor as the destination.
6. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  to modify route parameters, or tap  and start your journey.





3.1.4 Selecting the destination from your Favorites

You can select a location that you have already saved as a Favorite to be your destination. Adding a location to the list of Favorite destinations is described on page 47.


1. Access the list of Favorites:

- If you are on the Map screen, tap  and then tap .

- If you are in the Navigation menu, tap  and then tap



- The list of Favorite destinations is displayed.

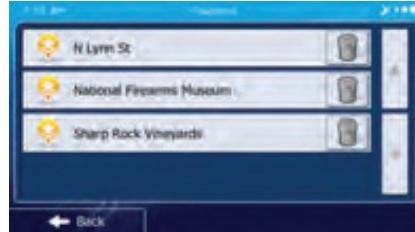

- Tap the Favorite that you want to set as your destination. If necessary, browse down to see more



of the list or tap  and enter a few letters from the name of the Favorite destination.

- A full screen map appears with the selected point in the middle. If necessary, tap the map



somewhere else to modify the destination. The Cursor () appears at the new location. Tap



to confirm the destination, or tap  to select a different destination.

- After a short summary of the route parameters, the map appears showing the entire route. The


route is automatically calculated. Tap  to modify route parameters, or tap

and start your journey.

3.1.5 Entering the coordinate of the destination


You can also select a destination by entering its coordinate. Do as follows:

- If you are on the Map screen, tap  to return to the Navigation menu.


- In the Navigation menu, tap .

38


3. Tap  Coordinate
4. You can enter the latitude and longitude values in any of the following formats: decimal degrees; degrees and decimal minutes; or degrees, minutes and decimal seconds.

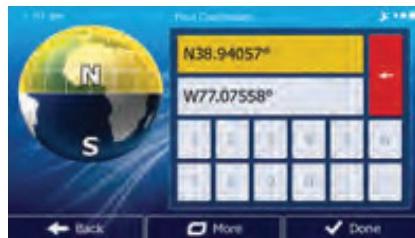

5. (optional) If necessary, tap  More then  UTM and enter the coordinate in UTM format.

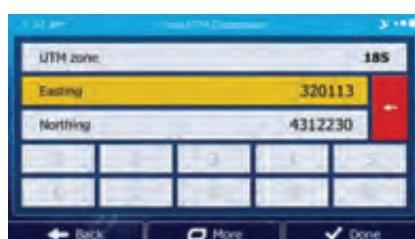



6. When finished, tap  Done
7. A full screen map appears with the selected point in the middle. If necessary, tap the map somewhere else to modify the destination. The Cursor () appears at the new location. Tap  Next to confirm the destination, or tap  Back to select a different destination.
8. After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated. Tap  More to modify route parameters, or tap  Go! and start your journey.

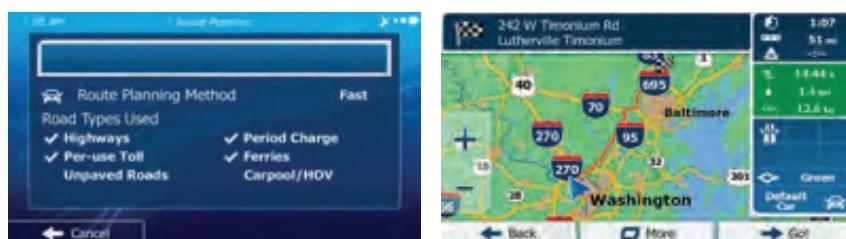



3.1.6 Building a route from the list of destinations (Create Route)

You can also build your route destination by destination from the My Route menu.

1. If you are on the Map screen, tap  to return to the Navigation menu.

2. In the Navigation menu, tap 


3. Tap 

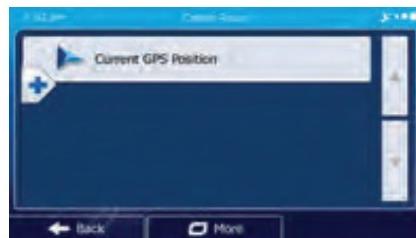


4. There is only one line in the list of route points, the start point of the route, normally the current GPS position.

5. Tap  to select the destination.

6. The Destination menu appears and you can select the destination of the route the same way as described in the previous sections.

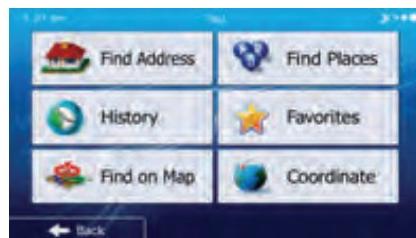



7. When the new destination is selected, the list returns.

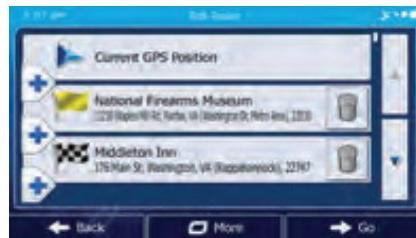


8. To add more destinations, tap  where you want to insert the new route point in the list, and repeat the above procedure.

3.2 Viewing the entire route on the map



It is easy to get a map overview of the active route. Do as follows:

1. If you are on the Map screen, tap  to return to the Navigation menu.
2. In the Navigation menu, tap 
3. Tap . The active route is displayed in its full length on the map together with additional information and controls.

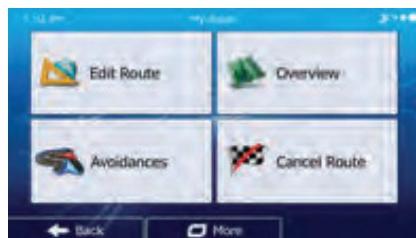

3.3 Checking route parameters and accessing route related functions

You can check different parameters of the route recommended by the software.

1. If you are on the Map screen, tap  to return to the Navigation menu.
2. In the Navigation menu, tap 
3. You have the following options on this screen (for detailed instructions on how to use them, see the next chapter):
 - Tap  to edit the route: to add or remove destinations or change their sequence. You can also set a route start point other than your current location. This can be useful to plan and save a future trip.
 - Tap  to display the entire route on the map.
 - Tap  to bypass a part of the route.
 - Tap  to delete the active route.

More

- Tap **More** to open a list with more options like selecting from route alternatives, changing route parameters, simulating the route, saving the active route or loading a previously saved route.
- Tap **Back** to return to the Navigation menu.

3.4 Modifying the route

When navigation is already started, there are several ways to modify the active route. The following sections show some of those options.

3.4.1 Selecting a new destination when already having a route: New Route, Waypoint or Final Destination

If you already have a recommended route and you select a new destination as described in the above sections, the application will ask you whether to start a new route, add a new waypoint (intermediate destination) to the route or append the newly selected destination at the end of the current route.




- Tap **New Route** to plan a new route to the newly selected location. The previous destination and waypoint(s) are deleted.
- Tap **Waypoint** to add the newly selected location as an intermediate destination to your route. The other destinations of the route remain intact. Note: the new waypoint is placed among destinations to keep the route optimal. To decide where a waypoint to appear, use the Edit Route feature.
- Tap **Final Destination** to append the newly selected destination at the end of the route. The other destinations of the route remain intact. The previous final destination is now the last waypoint.


3.4.2 Editing the list of destinations (Edit Route)

You can edit the route by modifying the list of destinations.

1. If you are on the Map screen, tap  to return to the Navigation menu.

2. In the Navigation menu, tap 

3. Tap 

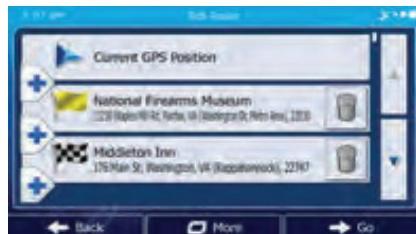

4. You have the following options:


- Tap  to add a new destination.
- Tap  to delete a destination.
- Tap  to reorder the list.

3.4.3 Pausing the active route

You do not need to pause the active route: when you start driving again, the software restarts the voice instructions from your position.

3.4.4 Canceling the active route

To cancel the navigated route, do one of the following:

- If you are on the Map screen, tap  and then tap . (If you have a route with waypoints, you need to tap  until all waypoints are deleted.)
- In the Navigation menu, tap  and then tap . The active route is deleted with all its waypoints.

3.4.5 Checking route alternatives when planning the route

You can select from different route alternatives or change the route planning method after you have selected a new destination. Do as follows:

1. Select a destination as explained earlier, and get to the route confirmation screen.



2. Tap More




3. Tap Route Alternatives

4. You see the basic details of three route alternatives with the selected route planning method. Tap any of them to see it on the map.



5. Or if you cannot find a good alternative, tap More Results and scroll down for routes with different routing methods.

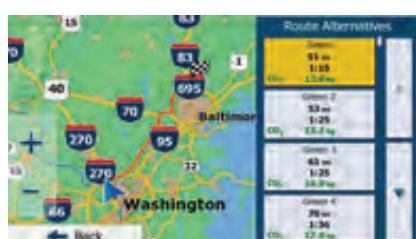



6. Select one of the route alternatives and tap Back to return to the previous screen. The software recalculates the route. The orange line now shows the new recommended route.

3.4.6 Checking route alternatives for an existing route


To recalculate the active route with a different route planning method, you can modify the Route settings (page 1). There is another way to do this and to compare different route alternatives with the same route planning method. Do as follows:

1. If you are on the Map screen, tap  to return to the Navigation menu.

2. In the Navigation menu, tap 

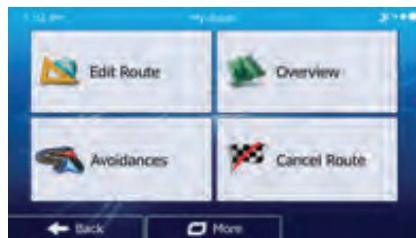


3. Tap 

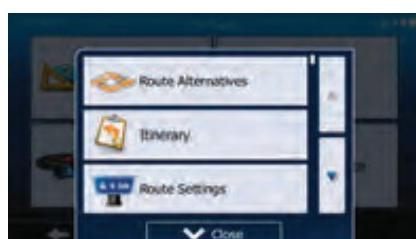

4. Tap 

5. You see the basic details of three route alternatives with the selected route planning method. Tap any of them to see it on the map.




6. Or if you cannot find a good alternative, tap  and scroll down for routes with different routing methods.


7. Select one of the route alternatives then tap and hold  for a few seconds to return to the Map screen. The software recalculates the route. The orange line now shows the new recommended route.

3.4.7 Changing the road types used in route planning

To recalculate the active route with different road type preferences, do as follows. These changes can also be made in Settings (page 1).



1. On the Map screen, tap and then tap .

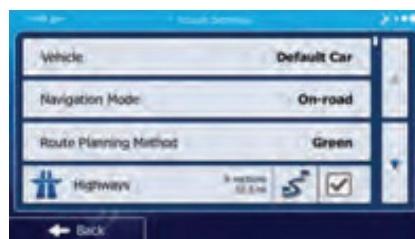

2. Tap any of the listed road types to modify the route. If needed, scroll the list for all road types. You have the following options (their order depends on the selected vehicle type):


- You might need to avoid freeways when you are driving a slow car or you are towing another vehicle.
- Charge roads are pay roads where you can purchase a pass or vignette to use the road for a longer period of time. They can be enabled or disabled separately from toll roads.
- The software includes toll roads (pay roads where there is a per-use charge) in the routes by default. If you disable toll roads, your software plans the best toll-free route.
- The software includes ferries in a planned route by default. However, a map does not necessarily contain information about the accessibility of temporary ferries. You might also need to pay a fare on ferries.
- The software excludes unpaved roads by default: unpaved roads can be in a bad condition and usually you cannot reach the speed limit on them.
- Carpool or HOV lanes can be used if a given number of passengers are traveling in the vehicle. You should check whether you are allowed to use carpool lanes before enabling this road type.

3. Tap to confirm the changes. The software recalculates the route. The orange line now shows the new recommended route.

3.5 Saving a location as a Favorite destination

You can add any location to Favorites, the list of frequently used destinations. Planning a route to one of the Favorite destinations is described on page 37.

1. Select a destination as described before. It can be an address, a Place, any location on the map, a previously used destination from History, a coordinate or a location where a photo was taken.
2. When the full screen map appears with the selected location in the middle, tap

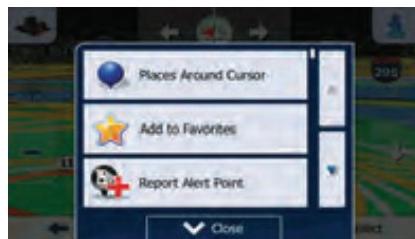



3. Tap **Add to Favourites**.
4. (optional) Using the keyboard, you can change the name offered for the Favorite. Tap **123** to enter numbers or symbols.



5. Tap **Done** to save the location as a new Favorite destination.

4 Off-road navigation

When first started, your Rosen Navigation System calculates routes using the road network of the high quality vector maps provided with the product. You can switch the application to off-road mode in Navigation settings in one of the following ways:

- From the Main menu, tap   and then 
- From the Map screen, tap   and then 

Most of the procedures described for on-road navigation also apply to off-road navigation. However, there are some that are not available in this navigation mode (for example you cannot open the itinerary as you have no maneuvers just route points and straight lines between them).

4.1 Selecting the destination of the route

Selecting the start point or a destination (waypoint or final destination) is the same as described at on-road navigation. The only difference is that route points are linked to form a route with straight lines regardless of the road network and traffic regulations.

4.2 Navigating in off-road mode

The real difference between the on-road and off-road modes is the navigation itself. When you are on the Map screen with an off-road route:

- your position and heading is not aligned with the nearest road and
- there is no turn by turn navigation just a recommended direction.

You see a light blue line drawn between your current position and the next destination to reach. The Turn Preview field in the top left corner shows a compass with your bearing and the distance of the next destination.



When you reach a waypoint, the light blue line will show the direction to the next destination. (Future legs of the route are shown with orange lines.)

When you reach the final destination, navigation ends.

5 Reference Guide

On the following pages you will find the description of the different concepts and menu screens of the software.

5.1 Concepts

5.1.1 Smart Zoom

Smart Zoom provides much more than just a usual automatic zoom feature:

- **While following a route:** when approaching a turn, it will zoom in and raise the view angle to let you easily recognize your maneuver at the next junction. If the next turn is at a distance, it will zoom out and lower the view angle to be flat so you can see the road in front of you.
- **While driving without an active route:** Smart Zoom will zoom in if you drive slowly and zoom out when you drive at high speed.

5.1.2 Daytime and night color themes

The software uses different color themes during the day and during the night for both the map and the menu screens.

- Daytime colors are similar to paper road maps, and the menus are bright.
- The night color themes use dark colors for large objects to keep the average brightness of the screen low.

The software offers different daytime and night color profiles. It can also switch automatically between the daytime and the night schemes based on the current time and GPS position a few minutes before sunrise, when the sky has already turned bright, and a few minutes after sunset, before it becomes dark.

5.1.3 Route calculation and recalculation

Your software calculates the route based on your preferences:

- Route planning methods:

- **Fast**: Gives a quick route if you can travel at or near the speed limit on all roads. Usually the best selection for fast and normal cars.
- **Short**: Gives a route that has the smallest total distance of all possible routes. It can be practical for slow vehicles.



Green

- **Green**: Gives a quick but fuel efficient route based on the fuel consumption data given in Green Routing settings (page 58). Travel cost and CO₂ emission calculations are estimations only. They cannot take elevations, curves and traffic conditions into account.

Easy

- **Easy**: Results in a route with fewer turns and no difficult maneuvers. With this option, you can make your software to take, for example, the freeway instead of a series of smaller roads or streets.

- Road types used or avoided in route calculation:

-  **Highways**
-  **Period Charge**
-  **Per-use Toll**
-  **Ferries**
-  **Unpaved Roads**
-  **Carpool**

Your software automatically recalculates the route if you deviate from the proposed itinerary.

For further information about Route settings, see page 1.

5.1.4 Green routing

Route calculation is not only about finding the quickest or shortest route. For some of the vehicle types, you can also check the fuel consumption and CO₂ emission when planning a route, and you can create cost effective routes with less effect on the environment.



In Settings, select **Green Routing** to enter the necessary parameters of your vehicle and the average fuel price. You can also select whether you want to see the difference between your route and the green route even if the selected routing method is not Green.

Green

After the above parameters are set, select **Green** as route planning method to get a fast but also fuel efficient route. Note that travel cost and CO₂ emission calculations are estimations only. They cannot take elevations, turns, curves and traffic conditions into account. Also, this routing is not meant to give you the "greenest" route of all. It is still important to travel quickly so the result is a fast route with low fuel consumption and CO₂ emission.

With a vehicle type where green routing is selectable, whichever route planning method is selected, the Green details are also shown when you confirm the route:



If the selected route planning method is not Green, and you have allowed the application to show the green alternative, the price, fuel consumption and CO₂ emission differences between your selected route and the Green route are also shown on this screen:



Tap the field with these details to switch the route to Green immediately.

5.1.5 Road safety cameras and other proximity alert points

There is a special proximity warning for road safety cameras (like speed or red light cameras) and other proximity alert points (like schools or railroad crossings). These alert points are preloaded in the software. You can download more from www.navixtras.com or you can upload points in a specific text file if needed.

The application can warn you when you approach road safety cameras like speed cameras or dangerous areas like school zones or railroad crossings. You can set up the different alert types individually in Sound and Warning settings (page 53).

The following alert types are available:

- Audio warning: beeps or the spoken type of the alert can be played while you are approaching one of these points, or extra alert sounds if you exceed the given speed limit while approaching.
- Visual warning: the type of the alert point, its distance and the related speed limit appear on the Map screen while you are approaching one of these cameras. The distance from the camera is also displayed.

For some of the alert points, the enforced or expected speed limit is available. For these points, the audio alert can be different if you are below or above the given speed limit.

- Only when speeding: The audio alert is only played when you exceed the given speed limit.
- When approaching: The audio alert is always played. In order to draw your attention, the alert can be different if you exceed the speed limit.

 **Note!** The warning for road safety cameras is disabled when the GPS position is not yet available or if you are in certain countries where road safety camera warning is prohibited.

5.1.6 Speed limit warning

Maps may contain information about the speed limits of the road segments. The software is able to warn you if you exceed the current limit. This information may not be available for your region (ask your local dealer), or may not be fully correct for all roads in the map. Speed warning can be fine-tuned in Sound and Warning settings (page 53).

You can set the relative speed above which the application initiates the warning.

The following alert types are available:

- Audio warning: you receive a verbal warning when you exceed the speed limit with the given percentage.
- Visual warning: the current speed limit is shown on the map when you exceed it (for example:



You can also choose to see the speed limit sign on the map all the time.


5.2 Settings menu

You can configure the program settings, and modify the behavior of the software. Tap the following





buttons:



The Settings menu has several options. Tap or scroll with your finger to see the full list.

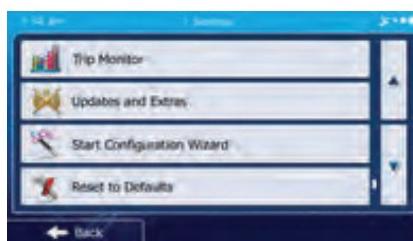


Button	Description
	Adjust the sound volume, mute your device or change the voice guidance language. In addition, you can enable and set up different warnings and alerts.
	The content of the Quick menu (page 15) is fully customizable. Tap the button you want to change, and select its new function from the list.
	These settings determine how routes will be calculated. Select the type of vehicle you are driving, the road types used in route planning, and the route planning method.
	These settings determine how Green routes will be calculated. They are also used to display the cost and CO ₂ emission of routes.

 Map settings	You can fine-tune the appearance of the Map screen. Adjust the map view to your needs, choose suitable color themes from the list for both daytime and night use, change the red arrow to a 3D car model, show or suppress 3D buildings, turn track logging on or off, and manage your Place visibility sets (which Places to show on the map).
 Visual Guidance	Settings related to guidance on the map screen can be adjusted here.
 Display	Display related settings include separate skins for daytime and night use and the brightness of the display.
 Regional	These settings allow you to customize the application for your local language, measurement units, time and date settings and formats, as well as to choose the time zone.
 Trip Monitor	Trip logs and track logs contain useful information about your trips. Trip logs can be saved manually when you reach your destination or you can turn on the automatic saving here.
 Updates and Extras	Visit www.navixtras.com to get additional content, such as new maps or 3D landmarks and useful applications.
 Start Configuration Wizard	Modify the basic software parameters set during the initial setup process. For details, see page 3.
 Reset to Defaults	Delete all saved data and reset all settings to their factory defaults.
 Help	Run the Demo to watch sample route simulations to see how navigation works. The About section provides you with product information. Read the Software and Database End User License Agreement, or check the map and other contents of the application. You can also access program usage statistics.

5.2.1 Sound and Warnings

Adjust the sound volume, mute your device or change the voice guidance language. In addition, you can enable and set up different warnings and alerts.

Button	Description
 Volume	Tap this button to adjust the volume of the different sounds in the application. A new screen shows the different sound types and their controls. See below for details.
 Voice language	This button shows the current voice guidance profile. By tapping the button, you can select a new profile from the list of available languages and speakers. Tap any of these to hear a sample voice prompt. Just tap when you have selected the new spoken language.

 Back

Speed Warning Settings	<p>Maps may contain information about the speed limits of the road segments. The software is able to warn you if you exceed the current limit. This information may not be available for your region (ask your local dealer), or may not be fully correct for all roads in the map. This setting lets you decide whether you wish to receive visible and/or audible warnings.</p> <p>Adjust the slider to set the relative speed above which the application initiates the warning.</p> <p>The following alert types are available:</p> <ul style="list-style-type: none"> • Audio warning: you receive a verbal warning when you exceed the speed limit with the given percentage. • Visual warning: the current speed limit is shown on the map when you exceed it. <p>If you prefer to see the speed limit sign on the map all the time (normally it is shown only if your speed exceeds it), you can set it here.</p>
Speed Camera Warning	<p>This feature allows you to receive a warning when approaching a Road Safety Camera. You must ensure on your own liability that using this feature is legal in the country where you intend to use it.</p> <p>This button is not displayed when GPS position is not available or if you are in certain countries where road safety camera warning is prohibited. Even if the button is available, you are responsible for checking whether it is legal to use this feature at your location.</p>
Proximity Alerts	<p>The application can warn you when you approach road safety cameras like speed cameras or dangerous areas like school zones or railroad crossings. Tap this button and set the different alert types individually.</p> <p>The following alert types are available:</p> <ul style="list-style-type: none"> • Audio warning: beeps or the name of the alert type can be played while you are approaching the camera, or extra alert sounds if you exceed the speed limit while approaching one of these cameras. • Visual warning: the type of the alert point, its distance and the related speed limit appear on the Map screen while you are approaching one of these cameras. The distance from the camera is also displayed. <p>For some of the alert points, the enforced or expected speed limit is available. For these points, the audio alert can be different if you are below or above the given speed limit.</p> <ul style="list-style-type: none"> • Only when speeding: The audio alert is only played when you exceed the given speed limit. • When approaching: The audio alert is always played. In order to draw your attention, the alert can be different if you exceed the speed limit. <p>Road safety cameras are not displayed in the list when GPS position is not available or if you are in certain countries where road safety camera warning is prohibited.</p>

Warning Sign Alerts	Maps may contain driver alert information. Tap this button to turn on or off these warnings and to set the distance from the hazard to receive the warning at. These can be set individually for the different warning types.
----------------------------	---

You can control the volume of the following sound types:

Button	Description
Master	This is the main volume control. These controls affect all below sounds. They can also be accessed from the Quick menu.
Guidance	These controls affect the volume of the guidance sounds (verbal instructions).
Alerts	These controls affect the volume of the alert sounds (beeps).
Music	These controls affect the volume of the background music.
Key Sounds	Key sounds provide audible confirmation of either pressing hardware buttons or tapping the touch screen. These controls affect key sounds.

Controls for each sound type:

Button	Description
Volume slider	Adjusts the volume of the related sound.
	Use the switch to mute the related sound. The slider becomes inactive. Tap again to re-enable.

5.2.2 Customize Quick menu

The content of the Quick menu (page 15) is fully customizable. Tap the button you want to change, and select its new function from the list.

The list of available functions and their descriptions are on page 15.

5.2.3 Route settings




These settings determine how routes will be calculated.

Button	Description
 Vehicle	You can edit the parameters of the vehicle profile.
 Navigation Mode	On-road navigation creates a turn by turn itinerary using the road network on the map. Switch to off-road navigation to navigate between destinations in a straight line.
 Route Planning Method	The route calculation can be optimized for different situations and vehicle types by changing the planning method. See below for details.

To let the route fit your needs, you can also set which road types are to be considered for or to be excluded from the route if possible.

Excluding a road type is a preference. It does not necessarily mean total prohibition. If your destination can only be accessed using some of the excluded road types, they will be used but only as much as necessary. In this case a warning icon will be shown on the My Route screen, and the part of the route not matching your preference will be displayed in a different color on the map.

In the list of road types you can see in how many segments and what total length of the road type is used in the current route.

Button	Description
 Highways	You might need to avoid freeways when you are driving a slow car or you are towing another vehicle.
 Period Charge	Charge roads are pay roads where you can purchase a pass or vignette to use the road for a longer period of time. They can be enabled or disabled separately from toll roads.
 Per-use Toll	The software includes toll roads (pay roads where there is a per-use charge) in the routes by default. If you disable toll roads, your software plans the best toll-free route.
 Ferries	The software includes ferries in a planned route by default. However, a map does not necessarily contain information about the accessibility of temporary ferries. You might also need to pay a fare on ferries.
 Unpaved Roads	The software excludes unpaved roads by default: unpaved roads can be in a bad condition and usually you cannot reach the speed limit on them.
 Carpool	Carpool or HOV lanes can be used if a given number of passengers are traveling in the vehicle. You should check whether you are allowed to use carpool lanes before enabling this road type.

Vehicle profiles:

When you tap  , you can set the following parameters:




Button	Description
Name	Tap this button to rename the profile for something meaningful.
Fuel Consumption Urban	Enter the average consumption of your vehicle when used in built-up areas. The unit for consumption can be set in Regional Settings.
Fuel Consumption Rural	Enter the average consumption of your vehicle when used on highways. The unit for consumption can be set in Regional Settings.
Type of Engine	Select the engine and fuel type of your vehicle. This helps in estimating the CO ₂ emission.
Price of Fuel	Enter the average fuel price for travel cost calculation. The currency can be set in Regional Settings.
Max. Speed	Set the maximum speed you travel with the vehicle.
Use Extended Settings	Check this box to enable more settings for the below parameters.
Length	Set the total length of the vehicle.
Width	Set the width of the vehicle.
Height	Set the height of the vehicle.
Trailer	Set if there is a trailer attached to the vehicle.
Maximum Allowed Weight	Set the maximum allowed weight of the vehicle.
Actual Weight	Set the actual weight of the vehicle.
Fracht	Select one or more hazard types if the vehicle carries dangerous material.

Route Planning Method types:

Button	Description
Fast	Gives a quick route if you can travel at or near the speed limit on all roads. Usually the best selection for fast and normal cars.
Short	Gives a short route to minimise the distance to travel. It can be practical for slow vehicles. Searching for a short route regardless of the speed, this route type is rarely practical for normal vehicles.
Green	Gives a quick but fuel efficient route based on the fuel consumption data given in Green Routing settings (page 58). Travel cost and CO ₂ emission calculations are estimations only. They cannot take elevations, curves and traffic conditions into account.
Easy	Results in a route with fewer turns and no difficult maneuvers. With this option, you can make your software to take, for example, the freeway instead of a series of smaller roads or streets.

5.2.4 Green routing settings

These settings determine how Green routes will be calculated. They are also used to display the cost and CO₂ emission of routes.

Button	Description
Fuel Consumption Urban	Enter the average consumption of your vehicle when used in built-up areas. If necessary, tap  More and select  Fuel Economy to change the measurement unit.
Fuel Consumption Rural	Enter the average consumption of your vehicle when used on highways. If necessary, tap  More and select  Fuel Economy to change the measurement unit.
Type of Engine	Select the engine and fuel type of your vehicle. This helps in estimating the CO ₂ emission.
Price of Fuel	Enter the average fuel price for travel cost calculation. If necessary, tap  More and select  Currency to change the currency.

Calculate Green Alternative	If the selected routing method is not Green, you can have your route compared to the best green alternative on the screen when confirming the route. If this alternative is much better than the selected method, you can quickly switch to Green mode.
------------------------------------	---

5.2.5 Map settings

You can fine-tune the appearance of the Map screen. Adjust the map view to your needs, choose suitable color themes from the list for both daytime and night use, change the red arrow to a 3D car model, show or hide 3D buildings, turn track logging on or off, and manage your Place visibility sets (which Places to show on the map).

The map is always shown on the screen so that you can see the effect when you change a setting.




Button	Description
View Mode 3D	Switch the map view between a 3D perspective view and a 2D top-down view.
Viewpoint Normal	Adjust the basic zoom and tilt levels to your needs. Three levels are available.
Colors Auto	Switch between daytime and night color modes or let the software switch between the two modes automatically a few minutes before sunrise and a few minutes after sunset.
Day Map Color	Select the color scheme used in daytime mode.
Night Map Color	Select the color scheme used in night mode.
3D vehicle Gallery	Replace the default position marker to one of the 3D vehicle models. You can select separate icons for different vehicle types selected for route planning. Separate icons can be used for car, pedestrian and the other vehicles.
Landmarks ON	Show or suppress 3D landmarks, 3D artistic or block representations of prominent or well-known objects.
Buildings ON	Show or suppress 3D city models, 3D artistic or block representation of full city building data containing actual building size and position on the map.

	Turn on or off track log saving, that is, saving the sequence of the locations your journeys go through.
	<p>Select which Places to show on the map while navigating. Too many Places make the map crowded so it is a good idea to keep as few of them on the map as possible. For this, you have the possibility to save different Place visibility sets. You have the following possibilities:</p> <ul style="list-style-type: none"> • Tap the checkbox to show or hide the Place category. • Tap the name of the Place category to open the list of its subcategories. • Tap  More to save the current Place visibility set or to load a previously saved one. Here you can also revert to the default visibility settings.

5.2.6 Visual guidance settings

Settings related to guidance on the map screen can be adjusted here.

	The data fields in the corner of the Map screen can be customized. Tap this button and select the values you want to see. The values can be different when you navigate a route from when you are just cruising without a given destination. You can select general trip data like your current speed or the altitude, or route data related to your final destination or the next waypoint on your route.
	You may need a gas station or a restaurant during your journey. This feature displays a new button on the map when you are driving on freeways. Tap this button to open a panel with the details of the next few exits or service stations. Tap any of them to display it on the map and add it as a waypoint to your route if needed.
	Select the service types displayed for the freeway exists. Choose from the POI categories.
	Whenever adequate information is available, lane information similar to the real ones on road signs above the road is displayed at the top of the map. You can turn this feature on or off.
	If you are approaching a freeway exit or a complex intersection and the needed information exists, the map is replaced with a 3D view of the junction. You can turn this feature on or let the map be displayed for the whole route.
	Turn on the route progress bar to see your route as a straight line on the left side of the map. The red arrow represents your current position and moves up as you travel. Waypoints and Traffic events are also displayed on the line.



5.2.7 Display settings

Display related settings include menu animations, separate skins for daytime and night use and the brightness of the display.

 Day Skin Theme	Select the style and colors of the application used in daytime mode.
 Night Skin Theme	Select the style and colors of the application used in night mode.
 Current Backlight	Adjust the display backlight.


5.2.8 Regional settings

These settings allow you to customize the application for your local language, measurement units, time and date settings and formats, as well as to choose the time zone.

Button	Description
 Program language	This button displays the current written language of the user interface. By tapping the button, you can select a new language from the list of available languages. The application will restart if you change this setting; you are asked to confirm this.
 Units and Formats	You can set the distance units to be used by the program. Your software may not support all the listed units in some voice guidance languages. Select between 12 and 24 hours time display and the various international date display formats.
 Time Zone	By default, time zone is taken from the map information and adjusted by your current location. Here you can set time zone and daylight saving manually.

5.2.9 Trip monitor settings

Trip logs contain useful information about your trips. Trip logs can be saved manually when you reach your destination or you can turn on the automatic saving here. You can access these logs in the Trip monitor. Trip monitor is available from the More menu.

 Enable auto-saving	Trip monitor can record statistical data of your trips. If you need these logs later, you can let the application save them automatically for you.
 Trip database size	This is not a button. This line shows the current size of the trip database, the sum of all trip and track logs saved.

 Save track log	<p>Track logs, the sequence of the positions given by the GPS receiver, can be saved together with trip logs. They can later be displayed on the map. You can let the application save the track log whenever it saves a trip.</p>
--	--

6 Glossary

2D/3D GPS reception

The GPS receiver uses satellite signals to calculate its (your) position and needs at least four signals to give a three-dimensional position, including elevation. Because the satellites are moving and because objects can block the signals, your GPS device might not receive four signals. If three satellites are available, the receiver can calculate the horizontal GPS position but the accuracy is lower and the GPS device does not give you elevation data: only 2D reception is possible.

Active route

The currently navigated route. Whenever the destination is set, the route is active until you delete it, reach your destination or you quit the software. See also: Route.

City Center

The city/town center is not the geometric center of the city but an arbitrary point the map creators have chosen. In towns and villages, it is usually the most important intersection; in larger cities, it is one of the important intersections.

Color theme

Your software comes with different color themes for daytime or night use of the map and menu screens. Themes are custom graphic settings and they can have different colors for streets, blocks or surface waters in 2D and 3D modes, and they display shades or shadows in different ways in 3D mode.

One daytime scheme and one night scheme is always selected for the map and for the menus. The software uses them when it switches from day to night and back.

GPS accuracy

Several factors have impact on the deviation between your real position and the one given by the GPS device. For example, signal delay in the ionosphere or reflecting objects near the GPS device have a different and varying impact on how accurately the GPS device can calculate your position.

Map

The software works with digital maps which are not simply the computerized versions of traditional paper maps. Similarly to the paper road maps, the 2D mode of digital maps show you streets, roads, and elevation is also shown by colors.

In 3D mode, you can see the altitude differences, for example valleys and mountains, elevated roads, and in selected cities 3D landmarks and 3D buildings are also displayed.

You can use digital maps interactively: you can zoom in and out (increase or decrease the scale), you can tilt them up and down, and rotate them left and right. In GPS-supported navigation, digital maps facilitate route planning.

North-up map orientation

In North-up mode the map is rotated so its top always faces North. This is the orientation for example in Find on Map. See also: Track-up map orientation.

Road Safety Camera

Special alert points for speed, red light or bus lane cameras. Different data sources are available. You can configure the software to warn you when you approach one of these cameras.

Detecting the location of Road Safety Cameras is prohibited in certain countries. It is the sole responsibility of the driver to check whether this feature can be used during the trip.

The software is capable of showing and warning for more than just cameras. Various other types of proximity alert points like school zones and railroad crossings are also available.

Route

A sequence of route events, i.e. maneuvers (for example, turns and traffic circles) to reach the destination. The route contains one start point and one or more destinations. The start point is the current (or last known) position by default. If you need to see a future route, the start point can be replaced with any other given point.

Track-up map orientation

In Track-up mode the map is rotated so its top always points in the current driving direction. This is the default orientation in 3D map view mode. See also: North-up map orientation.

Vehimarker

The current position is shown with a red arrow on the map by default. The direction of the red arrow shows the current heading. This position marker can be replaced with different vehicle and pedestrian symbols. You can even specify different Vehimarkers for different route types (depending on which vehicle type is selected for route calculation).

7 End User License Agreement

1 The contracting parties

1.1 This Agreement has been entered into by and between Nav N Go Kft. (registered seat: 23 Bérc utca, H-1016 Budapest, Hungary; Company reg.no.: 01-09-891838) as Licensor (hereinafter: Licensor) and You as the User (hereinafter: User; the User and the Licensor jointly referred to as: Parties) in subject of the use of the software product specified in this Agreement.

2 Conclusion of the Agreement

2.1 The Parties hereby acknowledge that this Agreement shall be concluded by implicit conduct of the Parties without signing the Agreement,

2.2 The User hereby acknowledges that following the lawful acquisition of the software product constituting the object of this Agreement (Section 4), any degree of use, installation into a computer or other hardware, installation of such hardware into a vehicle, pressing of the "Accept" button displayed by the software during installation or use (hereinafter referred to as Use) shall mean that the User has accepted the terms and conditions of this Agreement as legally binding.

2.3 This Agreement shall by no means authorise use of the software product by those persons having unlawfully acquired the software product or having unlawfully installed it on a computer or in a vehicle.

3 Relevant laws and regulations

3.1 Any action related to this Agreement will be governed by the laws of the Republic of Hungary, with specific reference to Act IV of 1959 on the Civil Code and to Act LXXVI of 1999 on Copyrights shall apply.

3.2 The original language version of this Agreement is the Hungarian version. This Agreement has versions in other languages as well. In case of dispute the Hungarian version shall prevail.

4 Object of the Agreement and Termination

4.1 The object of this Agreement shall be the navigation guidance software product of Licensor (hereinafter referred to as the Software Product).

4.2 The Software Product shall include the operating computer program, its complete documentation, the map database pertaining thereto and any third-party content and services accessible through the Software Product (hereinafter: Database).

4.3 Any form of display, storage, coding, including printed, electronic or graphic display, storage, source or object code, or any other as yet undefined form of display, storage, or coding, or any medium thereof shall be deemed parts of the Software Product.

4.4 Error corrections, additions, updates used by the User following the conclusion of this Agreement shall also be deemed parts of the Software Product.

4.5 Your rights under this Agreement will terminate immediately without notice from Licensor if you materially breach it or take any action in derogation of Licensor's and/or its licensors' rights to the Software Product. Licensor may terminate this Agreement should any Software Product become, or in Licensor's reasonable opinion likely to become, the subject of a claim of intellectual property infringement or trade secret misappropriation. Upon termination, you will cease use of, and destroy Software Product and confirm compliance in writing to Licensor

5 Rights under copyright

5.1 Unless otherwise provided by law or contractual provisions, the Licensor is the sole and exclusive owner of all material copyrights vested in the Software Product.

5.2 Copyrights extend to the whole Software Product and to its parts separately as well.

5.3 The owner(s) of the copyrights of the Database forming part of the Software Product is (are) the natural person(s) or corporate entity(ies) listed in the Appendix to this Agreement or in the "About" menu item of the operating computer program (hereinafter referred to as Database Owner). The user's manual of the Software Product includes the name of the menu option where all the owners of the Database items are listed. The Licensor hereby states that it has obtained sufficient usage and representation rights

from the Database owners in order to utilize the Database, to offer it for utilization and to transfer it for utilization as set forth in this Agreement.

5.4 Pursuant to this Agreement, all rights vested in the Software Product shall remain in the ownership of the Licensor, except for those to which the User is entitled under law or by virtue of this Agreement.

6 Rights of the User

6.1 The User is entitled to install the Software Product into one hardware device (desktop, handheld, portable computer, navigation device), and to run and use one copy of the Software Product or a preinstalled copy of the Software Product thereon.

6.2 The User is entitled to make one backup copy of the Software Product. However, if the Software Product operates after installation without the use of the original media copy, then the original media copy shall be deemed to be a backup copy. In all other cases, the User is only entitled to use the backup copy if the original media copy of the Software Product has been ascertainably and unequivocally rendered unsuitable for its lawful and intended use.

7 Limitations of use

7.1 The User is not entitled

7.1.1 to duplicate the Software Product (to make a copy thereof);

7.1.2 to lease, rent or lend it or to transfer it to a third person for any reason;

7.1.3 to translate the Software Product (including translation (compilation) to other programming languages);

7.1.4 to decompile the Software Product;

7.1.5 to evade the protection of the Software Product or to modify, circumvent or obviate such protection through technological or by any other means;

7.1.6 to modify, extend, transform the Software Product (in whole or in part), to separate it into parts, combine it with other products, install it in other products, utilize it in other products, not even for the purpose of achieving interoperability with other devices;

7.1.7 apart from using the computer program, to obtain information from the Database as a part of the Software Product, to decompile the Database, to use, copy, modify, extend, transform the Database in whole or in part or the group of data stored therein, or to install it in other products or otherwise, utilize it in other products or to transfer it, not even with the aim of achieving interoperability with other products.

7.2 The User may only use the contents available through the Software Product and provided by third parties and the data received through the services provided by third parties (including but not limited to the traffic data received from the RDS TMC traffic information service) for his/her own personal benefit and at his/her own risk. It is strictly prohibited to store, to transfer or to distribute these data or contents or to disclose them in full or in part to the public in any format or to download them from the product.

8 No warranty, limitation of liability

8.1 The Licensor hereby informs the User that although the greatest care was taken in producing the Software Product, given the nature of the Software Product and its technical limitations, the Licensor does not provide a warranty for the Software Product being completely error-free, and the Licensor is not bound by any contractual obligation whereby the Software Product obtained by the User should be completely error-free.

8.2 The Licensor does not warrant that the Software Product is suitable for any purpose defined either by the Licensor or the User, and does not warrant that the Software Product is capable of interoperating with any other system, device or product (e.g. software or hardware).

8.3 The Licensor does not assume any responsibility for damages incurred due to an error in the Software Product (including errors of the computer program, the documentation and the Database).

8.4 The Licensor does not assume any responsibility for damages incurred due to the Software Product not being applicable for any defined purpose, or due to the error or incompatibility of the Software Product with any other system, device or product (e.g. software or hardware).

8.5 The Licensor also draws the attention of the User to the fact that, when using the Software Product in any form of vehicle, observing the traffic regulations and rules (e.g. use of obligatory and/or reasonable and suitable security measures, proper and generally expected care and attention in the given situation, and special care and attention required due to the use of the Software Product) is the exclusive responsibility of the User. The Licensor shall not assume any responsibility for any damages occurred in relation to use of the Software Product in a motor vehicle.

8.6 By concluding the Agreement, the User shall, in particular, acknowledge the information stated in Section 8 above.

9 Sanctions

9.1 The Licensor hereby informs the User that, if the Licensor finds its rights under the Copyright Act to be breached, the Licensor may

9.1.1 seek judicial recognition of this breach;

9.1.2 demand that the breach cease and order the person in breach to refrain from continuing such actions;

9.1.3 demand that the person under breach give proper compensation (even by way of publicity at the expense of the person in breach);

9.1.4 claim the return of the increase of assets due to the breach;

9.1.5 demand the cease of the wrongful action and, demand restitution to its state before the breach was committed at the expense of the person in breach, and may demand the destruction of instruments and materials used to commit the breach as well as of the products created by the breach;

9.1.6 claim for damages.

9.2 The Licensor hereby also informs the User that the breach of copyrights and related rights is a crime under Act IV of 1978 on the Hungarian Criminal Code, which may be sentenced of two years in prison in basic cases and up to eight years in prison in aggravated cases.

9.3 Contents and services provided by third parties

The Licensor hereby excludes any liability of its own for the Database in the Software Product and for any content or service provided by a third party by using the Database. The Licensor does not warrant the quality, suitability, accuracy, fitness for a specific purpose or territorial coverage of the product or service or the availability of the service, and it specifically excludes any liability for the suspension of the service, and any damage arising in relation to the service or for complete cancellation of the service.

The relevant information and data in connection with the contents and services provided by third parties are available at www.navieextras.com. The User hereby acknowledges that the contents and services provided by third parties may only be used at the risk of the User and for the personal benefit of the User.

9.4 Contents and services provided by the Licensor or an agent of the Licensor

The Licensor or a contractual partner may offer various products and services to the User through www.navieextras.com. The User may only use these services when the User has read and understood the relevant end user license agreement(s) at www.navieextras.com and the User is obliged to use the services in line with the terms and conditions thereof.

9.5 The parties hereby agree that the courts of the Republic of Hungary will have exclusive jurisdiction to rule on any disputes arising in connection with this Agreement.

10. Anonymous data collection

10.1 The User hereby acknowledges that the Software Product may collect and store data connected to the usage of the Software Product by the User (e.g. movement/route data, user interaction data). Such data collection functions may be disabled or enabled by User any time from within the corresponding menu. The collected data is connected to the device type identifier of the device running the Software Product and not associated in any way with any personal information of the User or with the User itself.

10.2 The collected data may be uploaded to Licensor's database and used exclusively for the purpose of enhancing and improving the features and services of the Software Product and the Databases.

Uploading is executed through Licensor's special software or by the User navigation device, and the upload may be enabled or disabled by User. After successful data upload, the collected data is deleted from the Software Product storage media.

10.3 Collected data is transmitted, stored and handled anonymously and no connection of the data with the User shall be established by Licensor or any third party.

8 Copyright note

The product and the information contained herein are subject to change without prior notification.

This manual may not, in whole or in part, be reproduced or transmitted in any form either electronically or mechanically, including photocopying and recording, without the express written consent of Rosen Entertainment Systems.

© 2011 - Rosen Entertainment Systems


Data Source © 2006-2011 Tele Atlas. All rights reserved. This material is proprietary and the subject of copyright protection, database right protection and other intellectual property rights owned by Tele Atlas or its suppliers. The use of this material is subject to the terms of a license agreement. Any unauthorised copying or disclosure of this material will lead to criminal and civil liabilities.

All rights reserved.

NOTE: Features listed in this Owner's Manual may not be included in your Navigation version. All features and specifications listed herein are subject to change without notice.

Copyright 2011 Rosen Entertainment Systems, All Rights Reserved

DP-1002 REV B

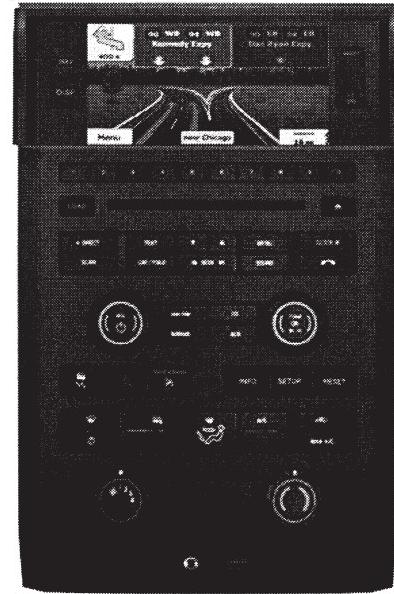

NOTICE OF INTENDED INSTALLATION AND USE

THE AUXILIARY VIDEO DISPLAY IS DISABLED WHEN THE VEHICLE'S PARKING BRAKE IS NOT ENGAGED

THE INSTALLER OF THIS PRODUCT MUST INSURE THE VIDEO DISABLE CONNECTION IS WORKING PROPERLY PRIOR TO DELIVERY OF THE VEHICLE.

IMPROPER INSTALLATION COULD DISTRACT THE DRIVER OR INTERFERE WITH SAFE OPERATION OF THE VEHICLE, WHICH COULD RESULT IN SERIOUS INJURY OR DEATH, AND COULD ALSO VIOLATE STATE AND/OR FEDERAL LAW.

CAR SHOW DISCLAIMS ANY LIABILITY FOR ANY BODILY INJURY OR PROPERTY DAMAGE THAT MAY RESULT FROM ANY IMPROPER OR UNINTENDED INSTALLATION AND/OR USE.

	<u>STOP</u> Damage to the vehicle may occur Do not proceed until process has been completed
	<u>CAUTION</u> Process must be carefully observed in order to reduce the risk of damage to the accessory or vehicle
	<u>CRITICAL</u> Process must be carefully observed in order to ensure a quality installation
	<u>TOOLS and EQUIPMENT</u> Specific tools and equipment recommended for this process
	<u>SAFETY RISK</u> Observe safe practices, this process can be dangerous and there is a risk of personal injury
	<u>TESTING and TROUBLESHOOTING</u> Content specific testing and troubleshooting points

CarShow Installation Guide

PREPARING FOR THE INSTALLATION

Before you start, please read these critical steps below

**STEP
1**


**BEFORE YOU START THE
INSTALLATION,
READ THIS GUIDE!**



CHECK THE BATTERY

Test the battery voltage to make sure it's fully charged to a minimum of 12.8 VDC


This only takes seconds and can save hours of troubleshooting later.

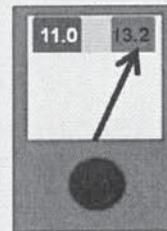

TURN THE VEHICLE

OFF

Keep the Vehicle Off during the installation to avoid setting various Vehicle Fault sensors

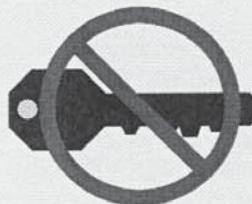

Keep the Vehicle OFF during the installation

Failure to follow this may cause the AIRBAG FAULT SENSOR to become enabled. Dealer Service Departments charge a significant fee to reset the Fault Sensor.

Disconnect Negative Battery Terminal Before Starting!!



CarShow Installation Guide

Tools Required For Installation:

- T30 Torx Bit
- 3/8" Drill Bit
- 9/16" Open End Wrench
- Panel pry/removal tool
- Various size Phillips screw drivers
- 7mm Socket



REMOVE CENTER CONSOLE COMPONENTS

**STEP
2**

This step is ONLY for vehicles equipped with a Center Console.

If your vehicle does not have a center console proceed to step 3



Remove Center Console

Carefully remove dash trim at front of center console



Remove Center Console

Carefully remove center console by pulling straight up




REMOVE THE FACTORY RADIO

STEP
3

You will need to remove multiple interior trim components prior to removing the factory radio.
The following steps will help guide you through this process.


Remove Top Dash Tray Cover

Carefully remove rubber dash tray cover at top of dash

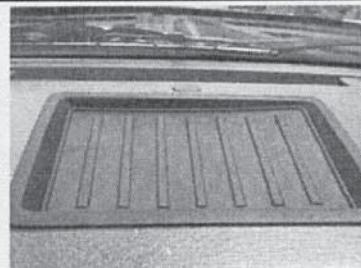


Dash Tray Cover Removed

Dash tray cover removed at right

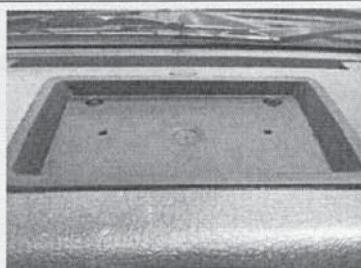


Remove Dash Tray Bolts

Carefully remove plastic dash tray 2x 7mm bolts
(1 left/ 1 right)

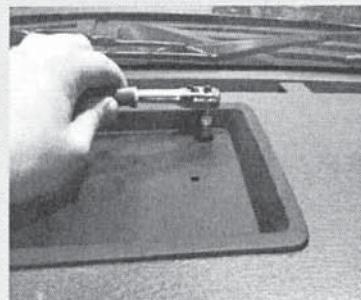

Remove Dash Tray

Carefully remove dash tray with pry tool


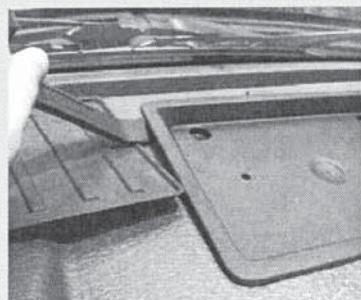


Lift Rubber At Top Of Radio




Left this to expose 2 x 7mm radio mounting bolts






CarShow Installation Guide

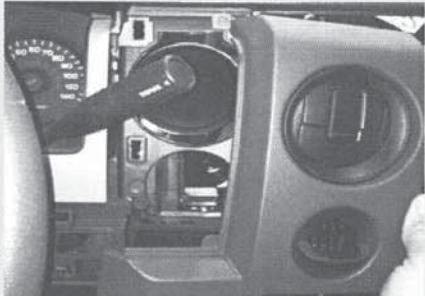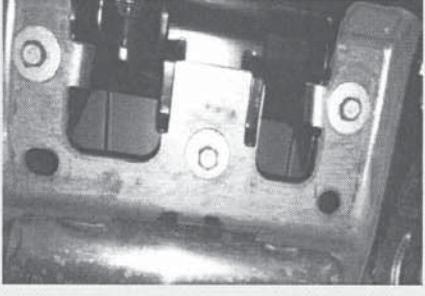Remove Top Mounting Bolts Carefully remove 2 x 7mm mounting bolts as shown at right		
Remove Instrument Cluster Trim Carefully remove instrument cluster trim with pry tool		
Remove Left Side Dash Trim Carefully remove left side dash trim Note: On vehicles with center consoles these panels will <u>NOT</u> be completely removed.		
Drop Glove Box Carefully drop glove box to gain access to bolts securing airbag.		
Carefully Remove Airbag Mounting Bolts Carefully remove 3 x 5/16 bolts that hold airbag mounting bracket. <u>**NOTE: DO NOT disconnect airbag harnesses under any circumstances!!!**</u>		





CarShow Installation Guide

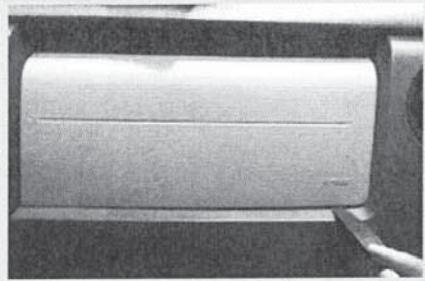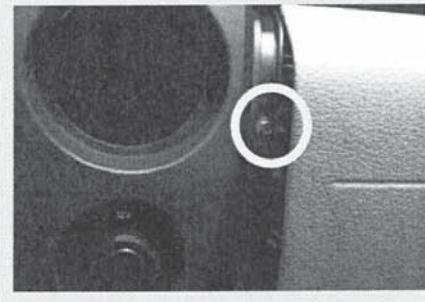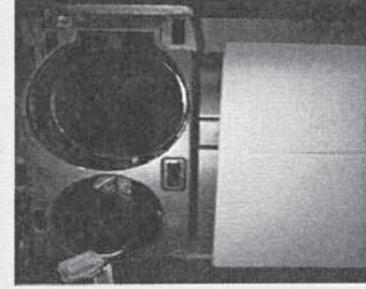Slide Airbag Towards You Carefully slide airbag towards you to expose dash panel mounting bolt		
Remove Right Side Dash Trim Carefully remove 7mm bolt holding right side dash trim in place. Then remove dash trim. Note: On vehicles with center consoles these panels will <u>NOT</u> be completely removed.		
Right Side Dash Trim Removed Right side dash trim removed at right Note: On vehicles with center consoles these panels will <u>NOT</u> be completely removed.		
Carefully Remove USB/3.5mm AUX Panel Using pry tool, carefully remove USB/3.5mm Aux panel To expose 7mm mounting bolt		
Unplug Panel Carefully unplug USB/3.5mm Media panel		

CarShow Installation Guide

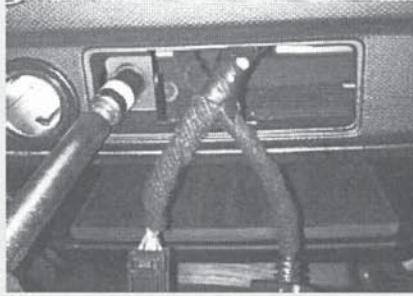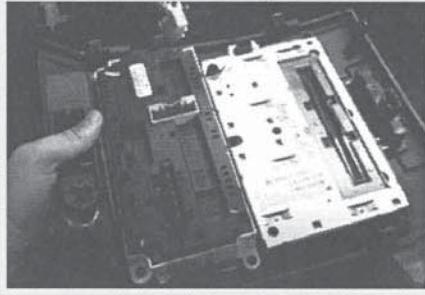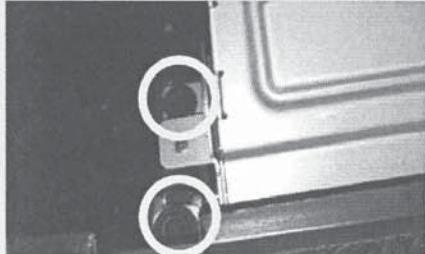Remove 7mm Bolt After Media panel has been unplugged, remove 7mm bolt		
Remove OEM Radio Panel Carefully remove OEM radio panel by pulling out towards you		
Unplug OEM Radio Panel Carefully unplug OEM radio harnesses		
Remove SYNC Display trim Bezel Carefully remove 4 x 7mm bolts holding in SYNC display housing		
Remove SYNC Display Carefully remove 4 x 7mm bolts (2 left/2 right) holding in SYNC display		

CarShow Installation Guide

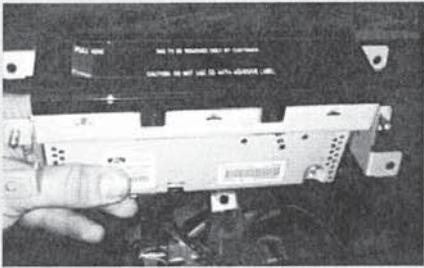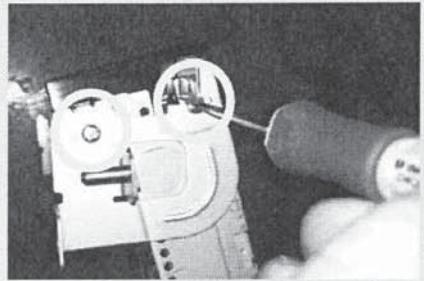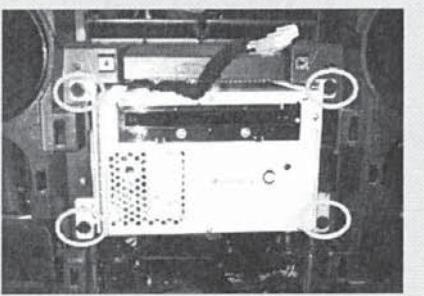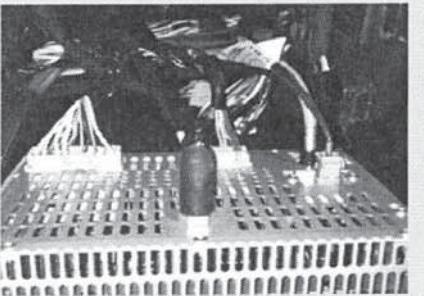Remove SYNC Display Carefully remove SYNC display and unplug all connections		
Remove SYNC Display Brackets Carefully remove 4 x Phillips (2 left/2 right) bracket screws		
Remove OEM Radio Unit Carefully remove 4 x 7mm radio mounting screws		
Unplug OEM Radio Unit Carefully unplug all harness and antenna connections from OEM radio unit		


LOCATING REMOTE COMPONENTS

You will need to mount the GPS Antenna on the exterior of the vehicle.
The following steps will help guide you through this process.

**STEP
4**

Use Caution around SRS Components It is the installer's responsibility to ensure that the safety equipment in the vehicle is NOT adversely affected by installation of this system. Ensure that the routing of the harnesses do NOT obstruct airbags, SRS or other safety devices.		
---	--	---



CarShow Installation Guide
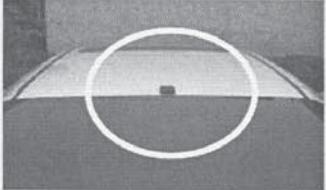
<p>Mount the GPS antenna in a location on the exterior of the Vehicle</p> <p>Route the GPS harness away from other power harnesses in the vehicle.</p> <p>This will help to ensure optimum performance of the GPS system.</p>		
--	--	---





Backup Camera Installation

**STEP
5**





The following steps will instruct you how to install included backup camera
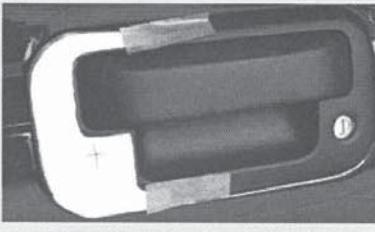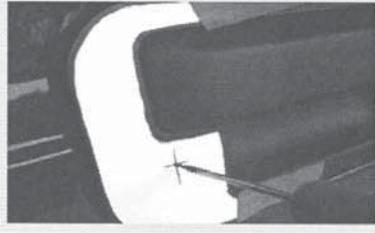
<p>OEM Lift Gate Handle</p>		
<p>Tailgate Cutout Template</p> <p>Use template on page 20 to attach to lift gate handle as shown at right</p>		
<p>Remove Lift Gate Panel</p> <p>Remove inner lift gate panel using T30 torx bit. <u>**Check inside of lift gate PRIOR to drilling mounting hole for camera**</u></p>		
<p>Mark Drilling Location</p> <p>Mark lift gate for drilling location using pick tool or flat blade screw driver</p>		





CarShow Installation Guide

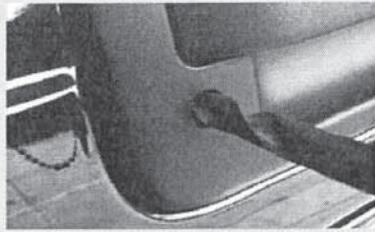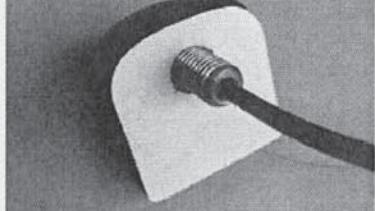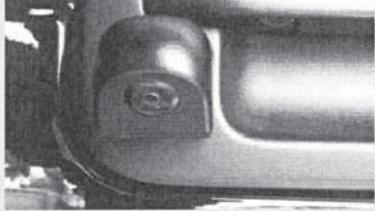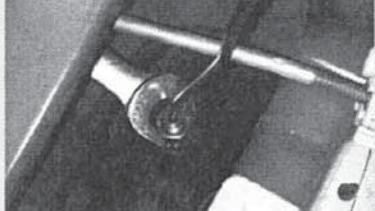Drill Camera Mounting Hole Drill 3/8" mounting hole in lift gate handle		 
Attach Camera Adhesive Attach foam camera adhesive to back of camera		
Insert Camera Into Lift Gate Carefully insert camera into lift gate and be sure camera is aligned properly		
Align Camera Once camera is aligned properly, apply pressure so that adhesive adheres properly to tailgate handle		
Install Mounting Hardware Put included locking washer and nut onto camera cable as shown at right		
Tighten Mounting Hardware Use 9/16 open end wrench to tighten		
Connect Cables Connect cables and be sure to put electrical tape on connections to ensure secure connection		



CarShow Installation Guide

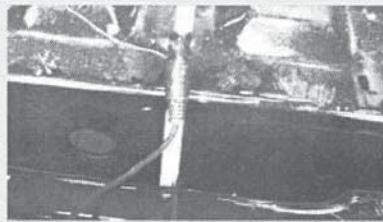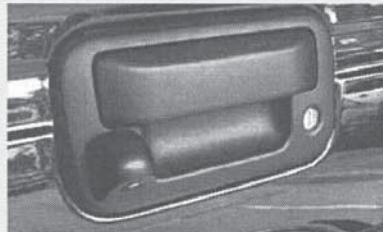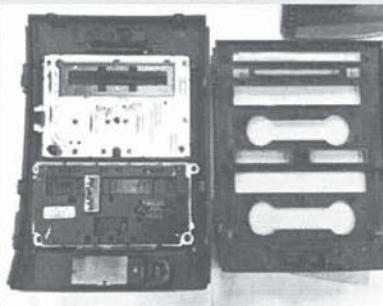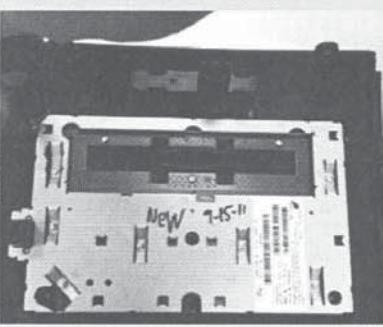Cable Routing Fish extension cable through center of truck and run towards front of vehicle		
Cable Routing Run cable through driver's floor board grommet as shown at right. Then route cable to radio cavity. Some vehicles will vary. Installer will need to use best judgment.		
Install Complete Install complete as shown at right		
Prepare Car Show Radio Bezel You will need to prepare the Car Show Navigation System for installation in the vehicle		STEP 6
OEM and Car Show Bezel Preparation OEM Radio Bezel on left and Car Show on right		
OEM Radio Face Assembly Remove 7x T10 torx screws to remove OEM Radio face Assembly		

CarShow Installation Guide

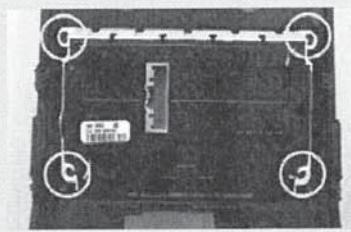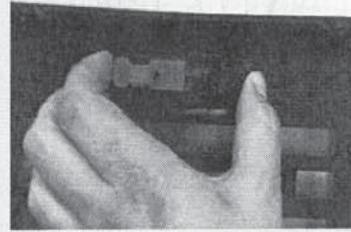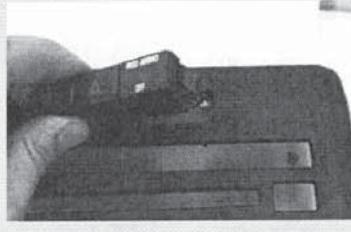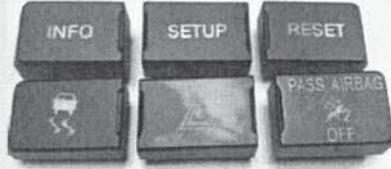OEM Radio Face Assembly Remove 4x T15 torx screws to remove OEM climate control Assembly		
OEM Hazard Switch Assembly Remove hazard switch assembly by depressing backside tabs on left and ride side		
OEM Hazard Switch Assembly Remove hazard switch assembly by pulling assembly out		
Optional Info Switch Assembly If vehicle is equipped with this optional Info switch, it is removed the same way as the hazard switch assembly.		
Included Buttons The included buttons need to replace the OEM buttons on the OEM switch assemblies. "Info, Setup, & Reset" buttons will only be used if vehicle is equipped with Info switch assembly mentioned above. OEM buttons are removed by pulling straight out. OEM buttons are a different size and will NOT fit in Car Show radio bezel		 
Install Switch Assemblies Install switch assemblies by snapping into place.		
Hazard Switch Assembly Hazard switch assembly installed at right		

CarShow Installation Guide

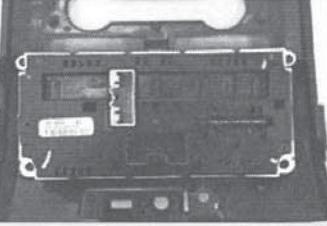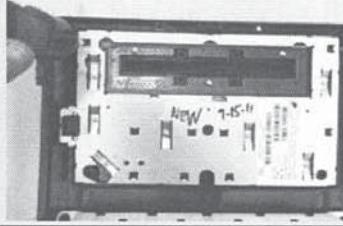Blank Switch Assembly If vehicle is not equipped with Info switch assembly then use included "blank" switch assembly shown at right.		
Blank Switch Assembly Blank switch assembly being installed at right		
Car Show Radio Face Assembly Re-install OEM climate controls to Car Show radio face assembly using 4x T15 OEM torx screws that were removed in previous step.		
Car Show Radio Face Re-install OEM radio face into Car Show radio face assembly using 7x T10 OEM torx screws that were removed.		
Car Show Radio Assembly Completed Car Show radio assembly at right		

CarShow Installation Guide

INSTALL THE CAR SHOW NAVIGATION SYSTEM

STEP
7


You will need to prepare the Car Show Navigation System for installation in the vehicle.

Connect GPS Antenna

The GPS Harness must be tightened with a WRENCH to ensure it is properly seated.


Failure to follow this step may result in poor GPS signal

See the Harness Diagrams for more information

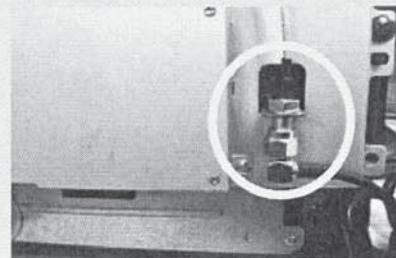


Prepare the Vehicle side harnesses for connection to the Car Show Harness

Use care not to pinch or damage cables as this will cause performance issues/failures

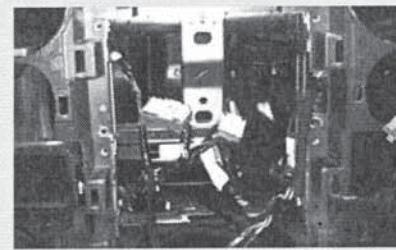


Connect Car Show Harness

Connect Car Show "T" harness to OEM harnesses.
Use care not to pinch or damage cables as this will cause performance issues/failures

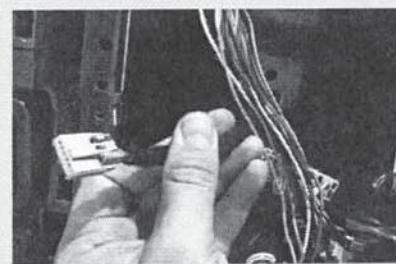


Connect OEM Radio Chassis

Connect OEM Radio chassis to Car Show "T" harness.
Be sure to connect AM/FM & Satellite Radio antennas.
Use care not to pinch or damage cables as this will cause performance issues/failures


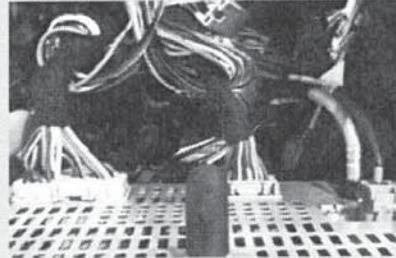


Connect the Power Harnesses






Be sure harness has secure connection to ensure proper performance

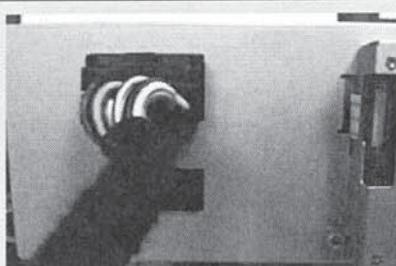



CarShow Installation Guide

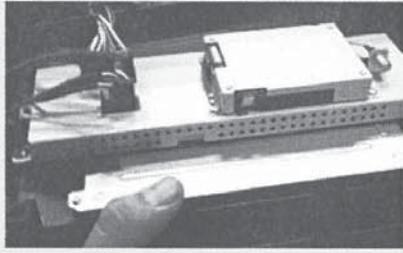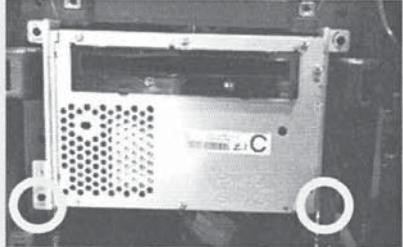
Install Car Show Nav Monitor Carefully install Car Show Nav display ensuring that ALL connections are secure		
Install Car Show Nav Monitor Carefully install Car Show Nav display ensuring that ALL connections are secure.		
Mount OEM Radio Chassis Into Dash Insert OEM Radio Chassis into dash and re-install radio mounting screws that were removed in step 2		
Radio Face Assembly Connect radio Face/climate control assembly harnesses. Be sure all connectors are securely connected.		
Snap Radio Face Assembly Into Place Carefully snap radio face assembly into place. Then, with the connectors <u>Fully Engaged</u> , turn the vehicle on and verify system powers up.		

CarShow Installation Guide

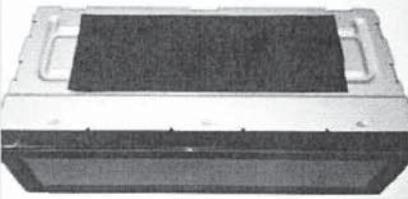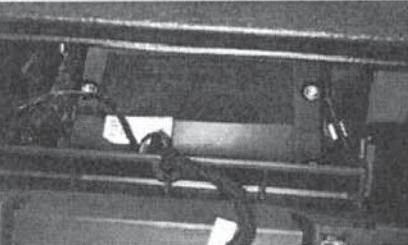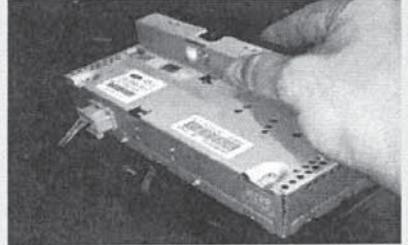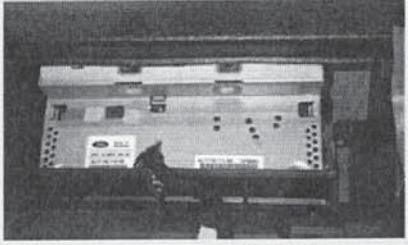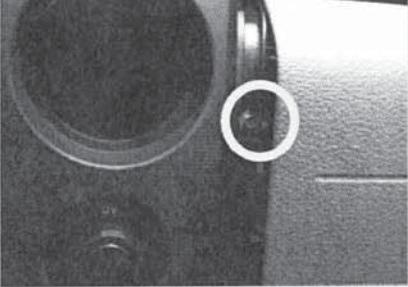Mount OEM SYNC Display Adhere included Velcro to bottom of OEM SYNC display		
Prepare OEM SYNC Module Adhere other included piece of Velcro to OEM SYNC module		
Re-install OEM SYNC Display Connect OEM SYNC Display to OEM harness and Velcro SYNC Display to SYNC Module NOTE: Be sure the harness is connected properly as SYNC system will not function properly unless connected.		
OEM SYNC Display OEM SYNC Display shown at right mounted to OEM SYNC Module via Velcro		
RE-INSTALL THE TRIM COMPONENTS You will need to reinstall all trim components that were removed in step 2		STEP 8
Re-Install Dash Trim Carefully re-install right hand side dash trim and be sure to replace the 7mm bolt that was removed in step 2.		

CarShow Installation Guide

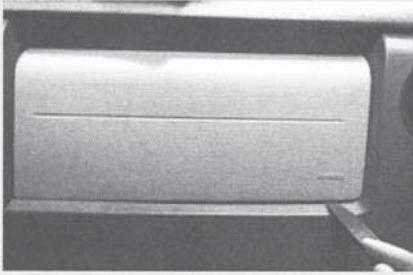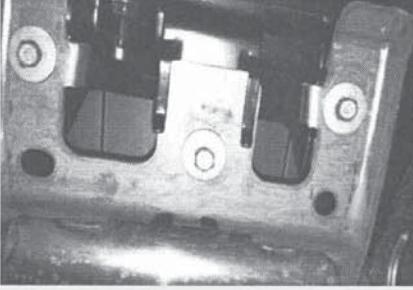Re-Install Dash Trim Carefully re-install left hand side dash trim and be sure that it's aligned properly		
Re-Install Passenger Side Airbag Carefully re-install passenger side airbag and glove box assembly <u>**NOTE: DO NOT disconnect airbag harnesses under any circumstances!!!**</u>		
Re-Install Airbag Mounting Bolts Carefully re-install 3x 5/16 passenger side airbag mounting bolts		

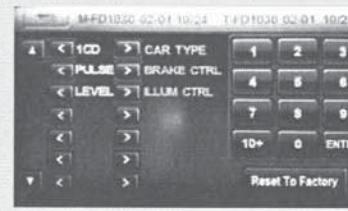ENABLE INSTALLER SETTINGS		STEP 9
Launch the Installer Setting Screen From any screen with the Menu Button, follow these steps to display the Installer Setting Screen, select: <ol style="list-style-type: none">1) From any Screen, select "Settings"2) Press "Keypad," Press "7253" and "Enter"		
Select the individual Settings as needed for the installed components Selectable options vary by product and installation. Select the options as applicable for the installed optional components.		

CarShow Installation Guide

STEP 10

Perform Pre-Delivery Tests

You will need to perform several Pre-Delivery Tests to ensure customer satisfaction
Some optional equipment may not be applicable

Turn the vehicle ON and System ON


Confirm the unit starts up properly

Troubleshooting

- 1) Reset the System while the Vehicle is ON
- 2) Confirm all connectors are properly installed
- 3) Check the Vehicle and System Fuses



Select RADIO as the Source

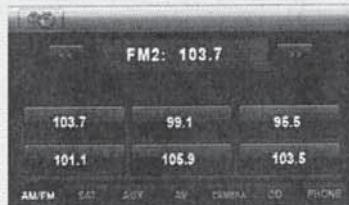

Select SATELLITE RADIO as the Source



Select Phone as the Source




Select NAV as the Source

Confirm the Navigation loads and signal strength is OK

Troubleshooting

- 1) Confirm the antenna has an unobstructed view of the sky
- 2) Confirm the antenna is located on the outside of the vehicle
- 3) Confirm the antenna connection is properly tightened

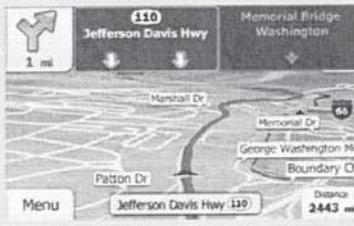

CarShow Installation Guide

Select Reverse Camera

Confirm the backup camera screen shows in reverse


Troubleshooting

- 1) Confirm the Camera is set to ON in the Installer Settings
- 2) Confirm the Camera is receiving 12VDC as required




Main Harness Diagram

Back of Car Show SYNC/Nav Display

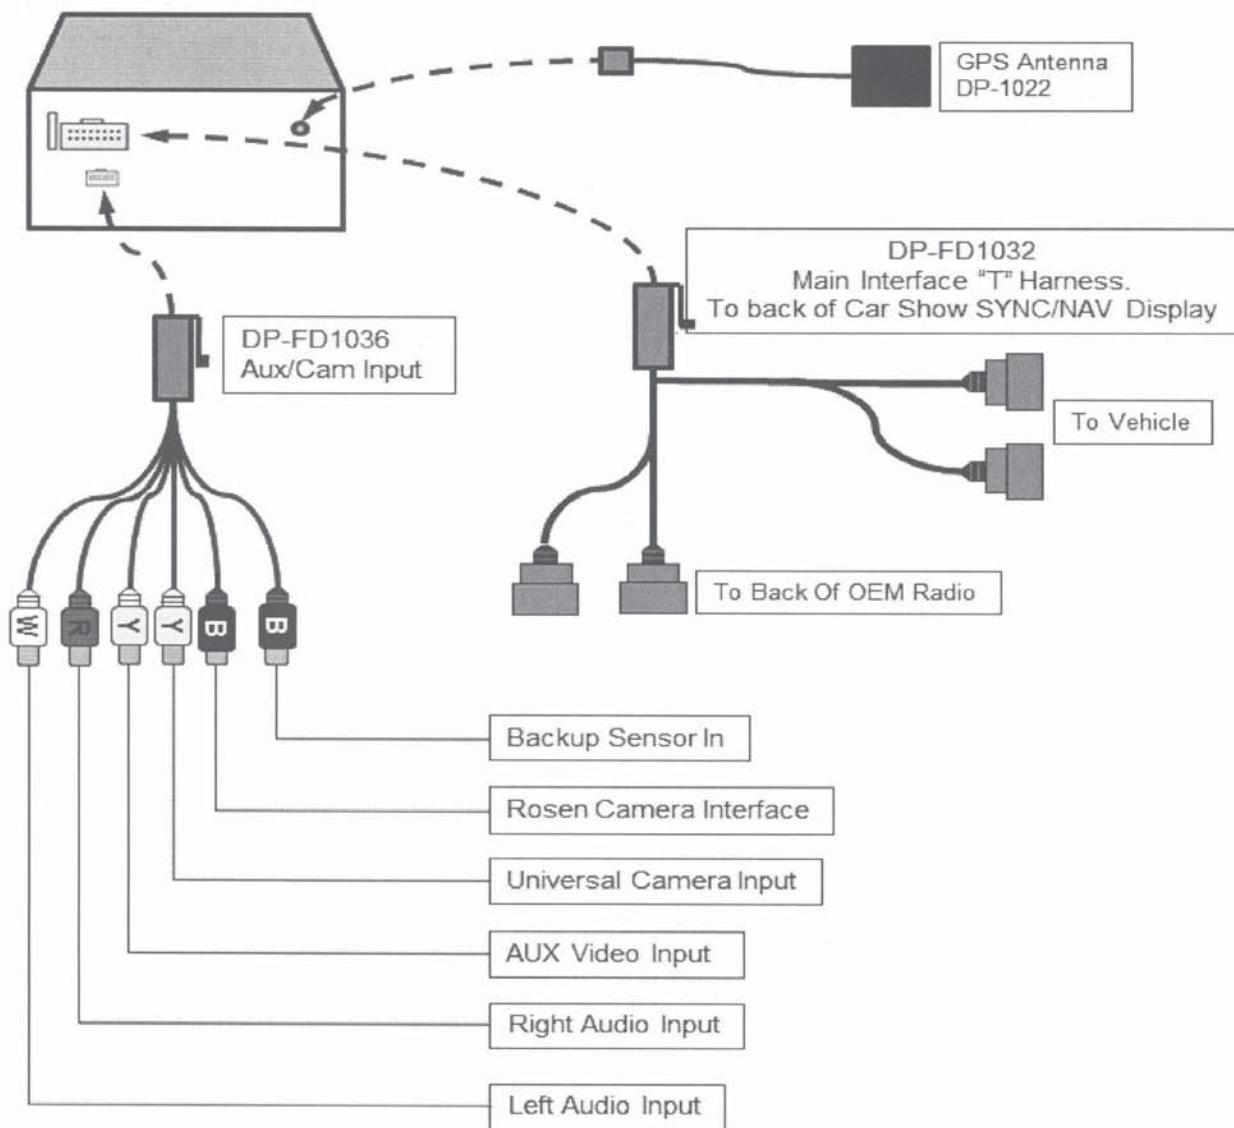

CarShow Installation Guide

F-150 Lift Gate Camera Template

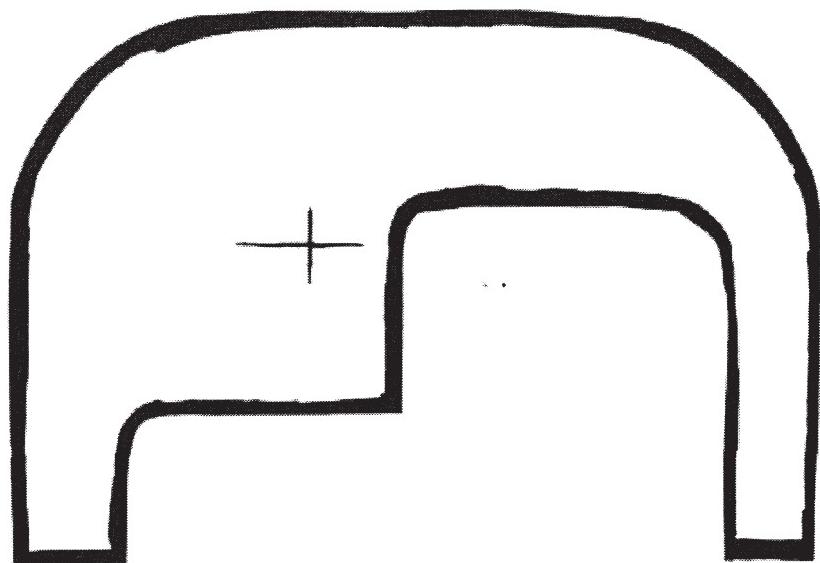

www.CarShowEntertainment.com

For additional installation tips, please visit our self-service portal
<http://selfservice.rosenentertainment.com/rosenentertainment/Main.aspx?url=>

Instructions:

Follow these steps to display the Installer Setting Screen:

- 1) From any Screen, select "Settings"



- 2) Press "Keypad," Press "7253" and "Enter"
- 3) Adjust settings based on Model Year of vehicle
- 4) Use < and > to adjust "Car Type" options

<u>Model Year</u>	<u>"Car Type" Setting</u>
2010 Model Year Settings	<ul style="list-style-type: none"> • Single Disc – 1CDA • 6-Disc In-Dash Changer – 6CDA
2011/2012 Model Year Settings	<ul style="list-style-type: none"> • Single Disc – 1CDB • 6-Disc In-Dash Changer – 6CDB

Note: In order for settings to take effect exit menu after "car type" is selected and then shut vehicle off completely (No ACC).

Wait 30 seconds and then restart vehicle.

- Verify "Illum Cntrl" setting is set to is "Level" for ALL Model Years.

For additional technical tips, please visit
www.Rosendealercentral.com

>>> Compatibility <<<

2010-2012 F150 With Folding Bench Seat

Tools Required:

Razor Blade or Dremel


Preparation



Mask off lower pocket. Measure 1.25 inches from pocket mounting boss mark, then measure another 1.25 inches and mark. Cut the plastic lip in between both marks with a (New) razor blade or Dremel to allow USB connector to sit flush.



(OEM Pocket)

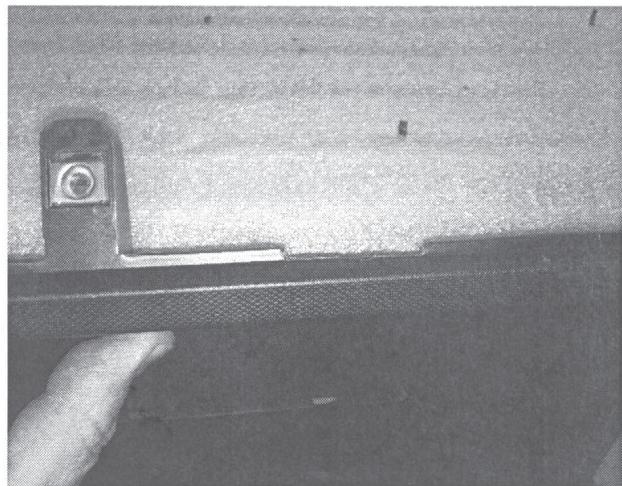

(OEM Pocket after Plastic was Removed)

Rosen Entertainment, LLC. assumes no responsibility with regards to the accuracy of this information. Proper installation in every case is and remains the responsibility of the installer. R.E.S assumes no liability or responsibility resulting from improper installation, even when the installer has relied upon this information

Vehicle Waterproof Cameras

Product Manual

Technical parameters			
Images sensors	CCD	CMOS (ov50)	CMOS (ov60)
Power Supply (DCV)	DC12V±1V	DC12V±1V	DC12V±1V
Power	<1W	<1W	<1W
Effective pixels	728*582/728*512	580*540/580*492	668*576/668*512
electronic shutter	1/60(NTSC)1/50(PAL) 1/10,000second	1/60(NTSC) 1/10,000second	1/60(NTSC)1/50(PAL) 1/10,000second
Minimum illumination	0.1 Lux	1 Lux	0.5 Lux
S/N Ratio	≥48dB	≥48dB	≥48dB
Resolution(TV Lines)	520	420	480
TV System	PAL/NTSC	NTSC	PAL/NTSC
Lens Angle (Deg.)	170°	170°	170°
Video output	1.0vp-p,75ohm	1.0vp-p,75ohm	1.0vp-p,75ohm
IP rating	IP66	IP66	IP66
White Balance	Auto	Auto	Auto
AGC	Auto	Auto	Auto
BLC	Auto	Auto	Auto
Operating Temperature (Deg.C)	-30C~+70C(RH95%MAX.)	-30C~+70C(RH95%MAX.)	-30C~+70C(RH95%MAX.)

The above parameters can be modified without separate notification.

General Troubleshooting Eliminating Barriers With The Following

Barriers Phenomena	Reason	Ways To Solve
Image Shaking	Fix-up Bracket Release	Adjust and Stablize
No image	Plugs without inserting well or system connect cables broken	Check the plugs inserting well or not, and system connect cables turn off or not
Image Blurring	cameras lens are dirty	Clean the camera lens
Image Slanting	Cameras are not installed in the right way	Adjust the bracket of cameras

Quality Assurance Card Product Repair Terms

Free repair during the warranty of product starts the purchasing date, and the specific details of warranty as follows:

- 1.Warranty period will be one year after purchasing. But the accessories of expendable are not in the lines of warranty.
- 2.Please notice that the following cases won't be in warranty:
 - ①There is no seals of release (sales point).
 - ②Without warranty certification and invoice.
 - ③Accessories failure.
 - ④The barriers or destroy by improper using, repairing or changing.
 - ⑤The barriers and destroy caused by changing, transit and drop of the using situation once after buying.
 - ⑥The barriers and destroy by the fire, flood, earthquake, thunder and natural disaster or the unusual power and voltage.
 - ⑦Using beyond the environment such as strong shocking and high temperature.
 - ⑧Barriers and damage caused by during transit.
 - ⑨Barriers and damage caused by operating the machine
- 3.Attention failure occurs:
Please go to the designated repair warranty card accepted for repair, in other places can not enjoy the warranty.

Quality Assurance Card

Commodity Name:	<input type="text"/>
Commodity Item	<input type="text"/>
Machine Number	<input type="text"/>
Purchasing Date	<input type="text"/>
Purchaser	<input type="text"/>
Buyers Address	<input type="text"/>
"Telephone"	<input type="text"/>

The name of releasing place and the address,telephon number,seal

2 It won't have the rights to get the goods repaired without the shop seals;

Please confirm the above item that whether recorded by the selling shop and read the contents carefully

Repair Record

Repair Date	Barriers Contents	Repair conten	Accessories Changed(Part No.)
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>


Sales Shop Save

Commodity Name:	<input type="text"/>	Commodity Item	<input type="text"/>
Machine Number	<input type="text"/>	Purchasing Date	<input type="text"/>
Purchaser	<input type="text"/>	telephone	<input type="text"/>
Buyers Address	<input type="text"/>		<input type="text"/>


Cameras installation manual

1.General installation location

A.Special type:a camera replaces an original license light

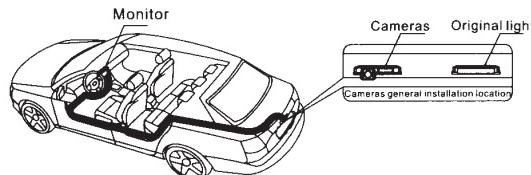


B.Universal type camera

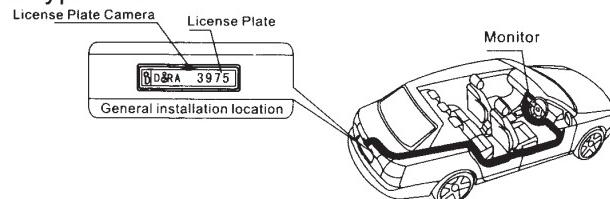


2.Wires connection guide

TYPE 1 Camera with license lights inside

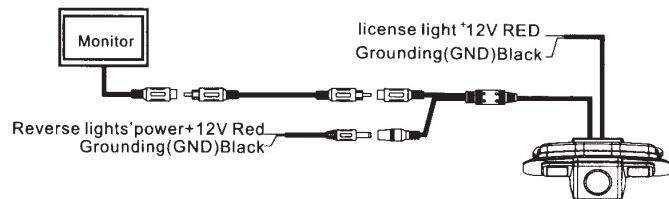

TYPE 2 Camera without license lights inside or Universal type

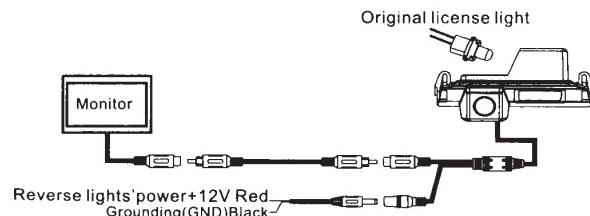


3.The Relay Function

A relay is needed that helps a camera to get power from car Accessory Power(ACC power 12C+),if some car's reverse lights'power is not enough for a camera to work.


A.

If camera's out-put connectors are RCA and DC Plug Female, the wire connection is as follows:

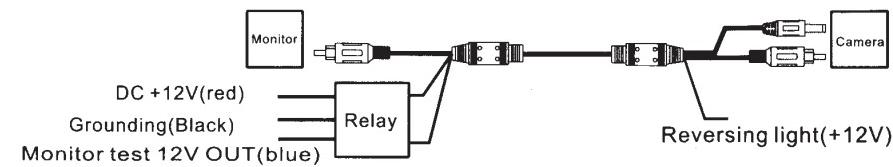

B.

If camera's out-put connectors are 4in1 mini jack, the wire connection is as follows:

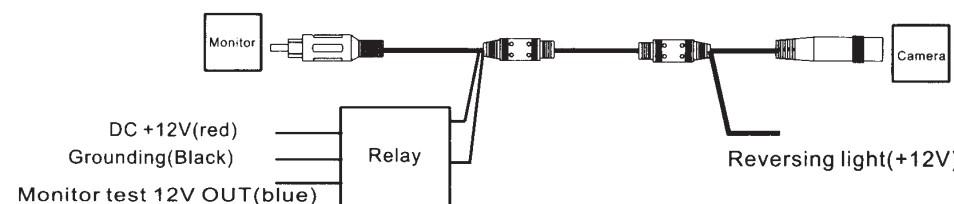

4.Original monitor on toyota camry and the signal line installs the digram

